

FAQ Maxwell - Network - IP

Introduction

Open the web-interface of the Maxwell 3 / Basic and go to: **Settings - Network - IP**

Valid for Maxwell			
Basic	2	3	4

SETTINGS

STATUS

Network

IP

LAN

Telephony

Online Directories

Online Services

Desk Phone

Web Configurator

System

Device name in network

Maxwell

Address Assignment

Network type

IPv4

IP address type

Dynamic

IP address

172.29.1.123

Subnet mask

255.255.255.0

Standard gateway

172.29.1.1

Preferred DNS

172.29.1.1

Alternate DNS

172.29.1.1

Settings

Feature	Value	Description
Device name in network	Maxwell	
Network type	IPv4	Select the protocol that is used in your network , IPv4 only
IP address type	Static	Select Static if your device has a fixed IP address
	Dynamic	Select Dynamic if your device receives the IP address via a DHCP server
IP address		Enter an IP address for your phone
Subnet mask		The subnet mask specifies how many parts of an IP address the network prefix must comprise
Standard gateway		Enter the IP address for the standard gateway through which the local network is connected to the Internet
Preferred DNS		Enter the IP address for the preferred DNS server
Alternate DNS		Enter the IP address for the alternate DNS server that should be used when the preferred DNS server cannot be reached

Auto provisioning

Parameter	Description
NET.General.DeviceNameInNetwork	a-z, A-Z, 0-9, -
NET.LAN.IP.DHCP.Enabled	0 = IP address type Static 1 = IP address type Dynamic (Default)
NET.IP.IPv4.Address	
NET.IP.IPv4.SubnetMask	
NET.IP.IPv4.StandardGateway	
NET.IP.IPv4.PreferredDNSServer	
NET.IP.IPv4.AlternateDNSServer	