FAQ Maxwell - Network - IP

inti	-01	411	0	ŀi,	<u></u>	n
IIIU	UU	սս	•		υ	

Open the web-interface of the Maxwell 3 / Basic and go to: Settings - Network - IP

Valid for Maxwell Basic 2 3 4

Network		Device name in network	Maxwell
LAN		Address Assignment	
Telephony	>	Network type	IPv4
Online Directories	>	IP address type	Dynamic
Online Services	>	IP address	172.29.1.123
Desk Phone	>	Subnet mask	255.255.255.0
Web Configurator	>	Standard gateway	172.29.1.1
System	>	Preferred DNS	172.29.1.1
		Alternate DNS	172.29.1.1

Settings

Feature	Value	Description
Device name in network	Maxwell	
Network type	IPv4	Select the protocol that is used in your network , IPv4 only
IP address type	Static	Select Static if your device has a fixed IP address
	Dynamic	Select Dynamic if your device receives the IP address via a DHCP server
IP address		Enter an IP address for your phone
Subnet mask		The subnet mask specifies how many parts of an IP address the network prefix must comprise
Standard gateway		Enter the IP address for the standard gateway through which the local network is connected to the Internet
Preferred DNS		Enter the IP address for the preferred DNS server
Alternate DNS		Enter the IP address for the alternate DNS server that should be used when the preferred DNS server cannot be reached

Auto provisioning

Parameter	Description
NET.General.DeviceNameInNetwork	a-z, A-Z, 0-9, -
NET.LAN.IP.DHCP.Enabled	0 = IP address type Static
	1 = IP address type Dynamic (Default)
NET.IP.IPv4.Address	
NET.IP.IPv4.SubnetMask	
NET.IP.IPv4.StandardGateway	
NET.IP.IPv4.PreferredDNSServer	
NET.IP.IPv4.AlternateDNSServer	