




FAQ Maxwell - Muting

Introduction

You can deactivate the microphone for the receiver, the speaker kit and the headset. The other party can then no longer hear you.

Press the  (Mute) key during the phone call.

Press the  key again to reactivate the microphone.

The  key is lit up while the function is activated.

Valid for Maxwell			
Basic	2	3	4