

Call-Through module

To call through, an authentication code is needed. Authorized phone numbers can be stored in a list of trusted callers. After entering the PIN and the required destination number of the call setup is performed automatically.

This module is default in the T300/T500, when accidentally deleted from the system you can download the module [here](#).



Important

After installing the module, update the module to the latest version using the automatic update procedure:

Go to: Configuration - Server - updates - Press "Search now"



[Download the module V.177](#)