
T300/T500 - Interconnection - Linesharing


For this tutorial we assume that we have two systems in an interconnection. PBX1 with a sip trunk. PBX 2 without any lines. - Of course, this tutorial can be adapted to other configurations.

1.0 Outgoing calls

To be able to dial out with a PBX on an interconnection, which has no defined external line, please follow these points:


 You should create a rule for each possible outgoing digit on "Interconnection -> Location routing", which means, that for an outgoing call the PBX1 line will be selected.

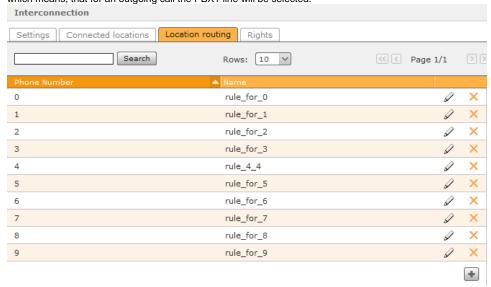

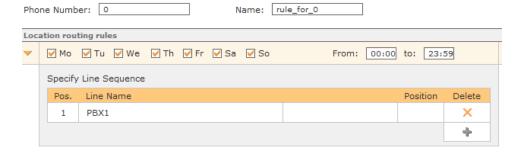


Of course the rule can be adapted to individual needs.

If not done yet, change the routing of the PBX1 to "line + COR" if you have mor than one line, otherwise "COR" can be chosen.

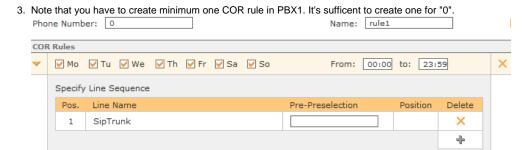



4. The last point to do in PBX1 is to activate "No Screening" for the line, which will be used for outgoing calls.

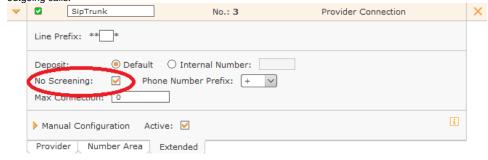

The next points are to make in PBX2:


Create in PBX2 a "Dummy" line, which include the real external numbers of the working line of PBX1.

For example:


PBX1: line "SIPTrunk", Numbers: 12345 [0-9] PBX2: line "Dummy", Numbers: 12345 [0-9]

Important: This line was only set up to give the users of PBX2 an external number. So it mustn't have a connection.



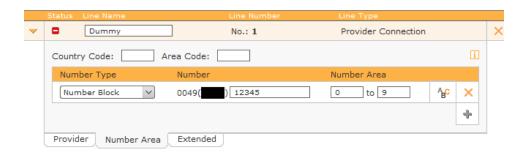

6. Add the external "dummy" number in PBX2 to the user, which one is allowed to call to external destinations. Make sure that the Display Number is set, too.

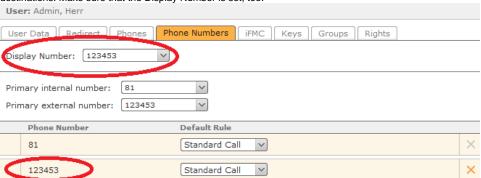


2.0 Incoming calls

To be reached from an external participant, a group must be created in PBX1 with the external number from PBX1 line "SIPTrunk", and which include only the User from PBX2. Of course the number should be the same like the Display Number from the PBX2 user. The Internal Phone Number isn't necessary, so it can be chosen an uninportant number.

Tip: To keep it clearly, it is recommended, that the group get the same name of the user from PBX2.

Group Name:	Admin		Chat group:	activate		
Ringing Strategy:	Ring All Group)	Voicemail B	ox: 🗌 activate		
Group ID:	0001]	Password:		Random Password	
Assigned Phone Numbers						
Internal Phone Number:				External Phone Number:		
89				- none -		
90				123450		
91				123451		
92				123452		
93				123453		
94				123454		
95				123455		
96				123456		
97				123457		
98				123458		
99		+		123459		

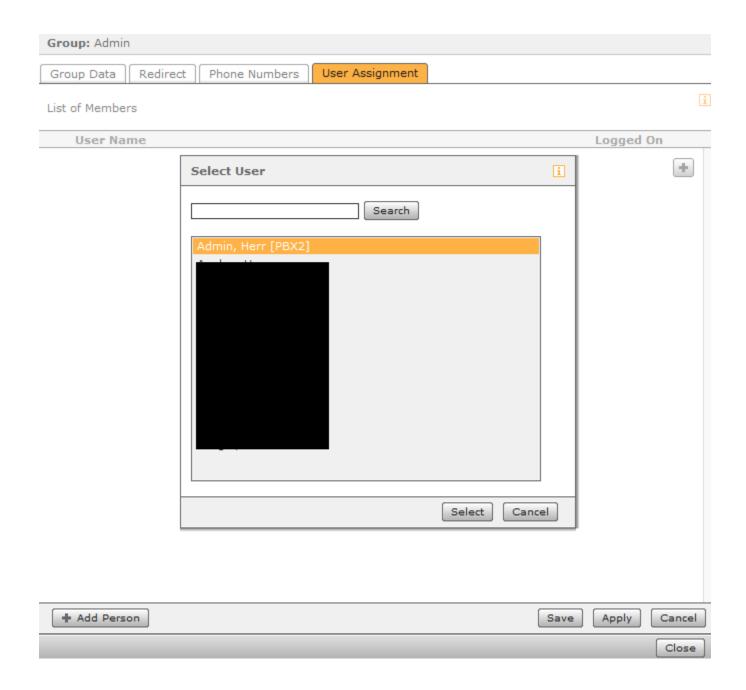

Now the user can also be called and called back from external users!

- 1.0 Outgoing calls2.0 Incoming calls