

# Maxwell 10 how to access web-interface

## Introduction

The Maxwell 10 can be configured via Auto provisioning and via the Web-interface like every Gigaset IP device.

By default the web-interface is disabled (**Google requirement**)

## Enable the Web-interface

First you need to enable the web-interface, you have to do this via the Touch screen.

On the Home page press the  icon and then the  Settings Icon to enable the WebUI.

## Access to the Web-interface

You can access the web-interface of the device from:

- Own device using: <http://127.0.0.1:8080> or <http://localhost:8080>
- Other PC/device using: <http://<IP address>>
- [Introduction](#)
  - [Enable the Web-interface](#)
  - [Access to the Web-interface](#)

