

FAQ Maxwell - Door station

Introduction

From software 1.15 the feature, Door station is supported.

You can operate up to 20 Door stations with video surveillance on the Maxwell 3/4. The pictures from the camera(s) are shown on the phone's display.

Maxwell Basic and 2 can also be configured to be used with Door stations, but is not capable to support pictures.

Prerequisite: The Door station must have been configured via the Maxwell 3/B web-interface.

If somebody rings the Door station, this is displayed as an incoming call on the Maxwell 3. The image from the video camera is also shown, the Maxwell will get the picture from the camera .. times per second so it looks like a video stream.

Valid for Maxwell

Basic

2

3

4

Configuration

In the web-interface go to: **SETTINGS - Online Services - Door Station**.

	Description
Name	Enter the name for the Door station, this is shown during ringing.
SIP ID	The SIP ID of the Door station, this is used to Recognize the Door station call.
DTMF code	<i>Optional:</i> The DTMF code for the door opener. The code can be found in the manual of your Door station.
Username	<i>Optional:</i> The Door station username if required.
Password	<i>Optional:</i> The Door station password if required.
Camera (URL)	Enter the URL of the Camera. The URL can be found in the manual of your Door station. Example: http://192.168.178.69/video.jpg Current supported is: jpg Image size is: 320 x 240 (If you use other format, the picture is not resized but a part of the picture is shown.)
Picture refresh time	Set how often the image should be refreshed in frames per second

SETTINGS

STATUS

Network

Telephony

Online Directories

Online Services

Door Station

Desk Phone

Web Configurator

System

Door Station

+ Add

Name	SIP ID	DTMF code	Picture refresh time
Door	202		2 fps

Name

Door

SIP ID

202

DTMF code

Username

Password

Camera (URL)

http://192.168.178.69/video.jp

Picture refresh time

2 fps

Gigaset

SETTINGS

STATUS

Network

Telephony

Online Directories

Online Services

Door Station

Door Station

Name

SIP ID

DTMF code

+ Add

Ringtones

In the web-interface go to: **SETTINGS - Desk Phone - Ringtones** to change the ringtone when receiving a Door Station call.

SETTINGS

STATUS

Network

Telephony

Online Directories

Online Services

Desk Phone

Main Menu

Ringtones

Display

Pictures

Ringtones

Default ringtone

Gigaset

Play

Use for all calls

Connection	Ringtone		
203	External calls	Gigaset	Play
	Internal calls	Gigaset	Play
	Group calls	Gigaset	Play
	Door Station	Tone one	Play

Auto provisioning

Parameter	Description
NetSrv.DoorStations.0-19.Name	
NetSrv.DoorStations.0-19.SIPID	
NetSrv.DoorStations.0-19.DTMFCode	
NetSrv.DoorStations.0-19.Username	
NetSrv.DoorStations.0-19.Password	
NetSrv.DoorStations.0-19.CameraURL	This parameter is ignored by Maxwell 2
NetSrv.DoorStations.0-19.PictureRefreshTime	Time in msec, see below for the allowed values. 500 = 2 fps 200 = 5 fps 100 = 10 fps 67 = 15 fps This parameter is ignored by Maxwell 2