

# FAQ Maxwell - Firmware update via TFTP


Introduction

You can start the Firmware upgrade/downgrade via TFTP command

Open Windows Command Prompt

`ftpput -i <IP address> <filename>`

On certain windows versions, ftp is disabled. You can enable this via the Windows option "Turn Windows Features On / Off"

 **Important**

ftpput upgrade will also delete all settings.

Valid for Maxwell

Basic	2	3	4
-------	---	---	---