

FAQ Maxwell - Auto provisioning parameters via SIP Notify

Introduction

The Maxwell offer the possibility to push up to **50** provisioning parameters via a SIP Notify.

Precondition:

- At least one registered VoIP account
- Login to Web-UI as administrator
- Go to Expert page - Advanced Settings
- Set "Allow Remote Control" to "Yes"
- Set "Remote Control Source" to IP address or domain of PBX/trusted server

Valid for Maxwell

Basic

2

3

4

Auto-provisioning

Auto-provisioning parameter	Description
System.Security.RemoteControl.Allow	0 = Disabled (Default) 1 = Enabled
System.Security.RemoteControl.Source	IP address or Domain
Example: <code><param name="System.Security.RemoteControl.Allow" value="1" /></code> <code><param name="System.Security.RemoteControl.Source" value="192.168.100.1" /></code>	

You can use up to **50** parameters from the Provisioning parameter list.

Example of SIP Notify

```
NOTIFY sip:Bob.Maxwell3@192.168.100.100:5060 SIP/2.0
Via: SIP/2.0/UDP 192.168.100.1:5060;branch=xxxxxx;rport
From: "Gigaset" <sip:Gigaset@192.168.100.1>;tag=xxxxxx
To: <sip:Bob.Maxwell3@192.168.100.100:5060>
Contact: <sip:Gigaset@192.168.100.1>
Call-ID: xxxxxxxx@192.168.100.1
```

CSeq: 102 NOTIFY

User-Agent: Gigaset PRO

Max-Forwards: 70

Event: xml

Content-Type: application/xml

Content-Length: [length]

```
<?xml version="1.0" encoding="UTF-8"?>
<provisioning version="1.1" productID="mx3b">
<nvm>
<param name="System.DateAndTime.DateOrder" value="mm.dd.yyyy"/>
<param name="System.DateAndTime.TimeFormat" value="12h"/>
<param name="System.DateAndTime.TimeServer" value=""/>
<param name="System.DateAndTime.TimeZone" value="GMT-2.Atlantic/South_Georgia"/>
</nvm>
</provisioning>
```