

FAQ - Auto provisioning: firmware/update.xml

| | | | | | | |
|------------|------|------|------|-------|---------------------|--------------------|
| Valid for: | N610 | N670 | N870 | N870E | Embedded Integrator | Virtual Integrator |
|------------|------|------|------|-------|---------------------|--------------------|

Valid for N610 / N670 / N870 / N870E.

Provisioning version 1.0 is used, preferred is [provisioning version 1.1](#)

This file provides information about:

- Available software
- URL of the software

If the version value is newer then the used software, the software download is started. After download the software update will start immediate and the N870 will reboot. If the version value is older then the used software, nothing will happen.

```
<?xml version="1.0" encoding="UTF-8"?>
<firmware version="1.0" productID="e2">
    <file version="2.12.0" url="http://profile.gigaset.net/fake/fw.bin" />
</firmware>
```

Firmware update can be done via:

- HTTP
- HTTPS