

# FAQ Nx70 - Change the role

Valid for:	N610	N670	N870	N870E	Embedded Integrator	Virtual Integrator
------------	------	------	------	-------	---------------------	--------------------

## Introduction

This DECT platform has one hardware, the device can have the following role.

### DECT Base (N870 & N670)

- By default, the N870 is a DECT Base.
- By default, the N670/N610 has the role: Integrator + DECT Manager + DECT Base
- A DECT base has mini web-interface
- If the device is configured as DECT Manager, you can reset this device to Base via: Web-interface: **Settings - System - Reboot and reset - Reset to Base only**.
- Via the hard-key, see: [FAQ - Installation](#)
- Via the Power procedure, see: [FAQ - Reboot and Reset to factory default](#)

### DECT Manager + DECT Base (N870 & N670)

- Web-interface: **Settings - System - Reboot and reset - Reset to DECT-Manager + Base - dynamic IP**.
- Web-interface: **Settings - System - Reboot and reset - Reset to DECT-Manager + Base - keep IP**.
- Via the hard-key, see: [FAQ - Installation](#)
- Via the Power procedure, see: [FAQ - Reboot and Reset to factory default](#)

### Integrator + DECT Manager + DECT Base (N870 & N670 & N610)

- Web-interface: **Settings - System - Reboot and reset - Reset to All in one - dynamic IP**.
- Web-interface: **Settings - System - Reboot and reset - Reset to All in one - keep IP**.
- Via the hard-key, see: [FAQ - Installation](#)
- Via the Power procedure, see: [FAQ - Reboot and Reset to factory default](#)

### Integrator + DECT Manager (N870 & N670)

- Web-interface: **Settings - DECT Manager - Administration - Edit DECT manager - change Capacity to Medium**.
- Web-interface: **Settings - Base stations - Administration - Edit Local Base-station - Activate base station to No**.
- 

### DECT Manager (N870 & N670)

- Configure the device as DECT Manager + DECT Base via the above procedure.
- Connect to the virtual integrator.
- Via the integrator switch of the DECT base:
  - Web-interface: **Settings - DECT Manager - Administration - Edit DECT manager - change Capacity to Medium**.
  - Web-interface: **Settings - Base stations - Administration - Edit Local Base-station - Activate base station to No**.



When changing the device role the system is reset to factory setting. This means, that existing configuration and user data will be lost.

If you change the role of a device that has been acting as Integrator, you should save the configuration previously