
FAQ Maxwell - Client certificates

Introduction

From software 2.25 it is possible to upload client certificates via the web-interface.

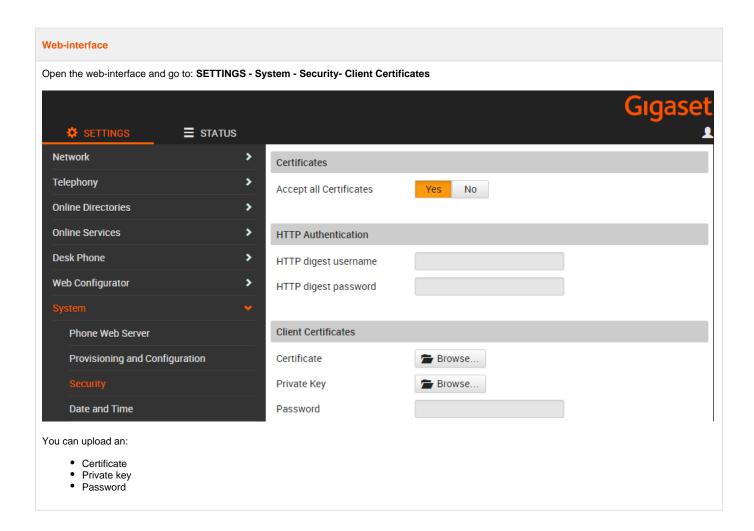

Auto-provisioning

See below for an example how to configure this via auto-provisioning.

- You need to use the <custom> </custom>
 The password="pass" is optional. If you don't use it, just remove it from the template.

```
provisioning example
<?xml version="1.0" encoding="UTF-8"?>
cprovisioning version="1.1" productID="mx3b">
<nvm>
</nvm>
<custom>
         <step type="Clientcertificate" url="http://172.29.7.32/custom/certificate.crt" /> <step type="Clientkey" url="http://172.29.7.32/custom/privatekey.pem" password="pass" />
</custom>
```