

FAQ Maxwell - Show SIP message on the Display.

Introduction

You can send SIP messages to the Maxwell, these will be visible on the display.

Valid for Maxwell

Basic

2

3

4

How to send a SIP message

Install a program like SIPSak to send SIP messages.

sipsak

```
sipsak -i -M -B "Test" -s sip:Name@PhoneIP
```

Example:


```
sipsak -i -M -B "Test" -s sip:1012@192.168.178.43
```

Session Initiation Protocol (MESSAGE)

- Request-Line: MESSAGE sip:1012@192.168.178.43 SIP/2.0
 - Message Header
 - Message Body
 - Line-based text data: text/plain (1 lines)
- Test

Result:

Maxwell 2 / 3:

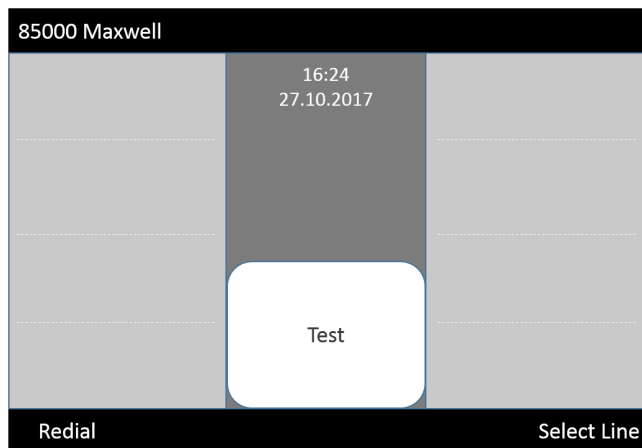


To delete the message, you can send an "empty" SIP message, or press the **"Back"** key if option is enabled.

Web-interface:

In the web-interface you can define the behavior:

Show SIP messages on display: Enable / Disable the feature to show SIP messages.

Clear SIP message
with the back key.

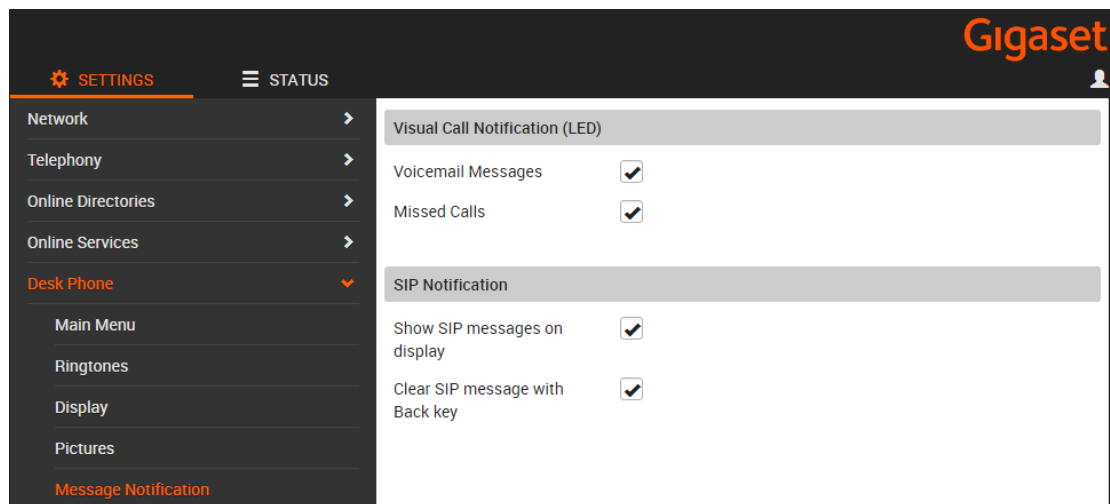

Auto provisioning

Parameter	Value
PhoneUI.SIP.ShowSIPMessagesOnDisplay	0=Do not show SIP message
	1=Show SIP messages (Default)
PhoneUI.SIP.ClearSIPMessageWithBackKey	0=Delete message with back key disabled
	1=Delete message with back key enabled (Default)