

FAQ - Integrator role N870 only



Introduction

From software 2.26 the Integrator only role is officially released.

This role can be selected from the web-interface.

Go to: **SETTINGS - System - Reboot and Reset - Reset to:**

- Integrator only - Dynamic IP
- Integrator only - Keep IP

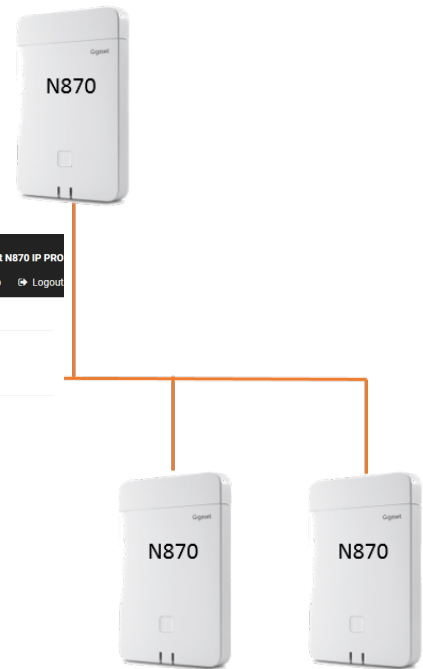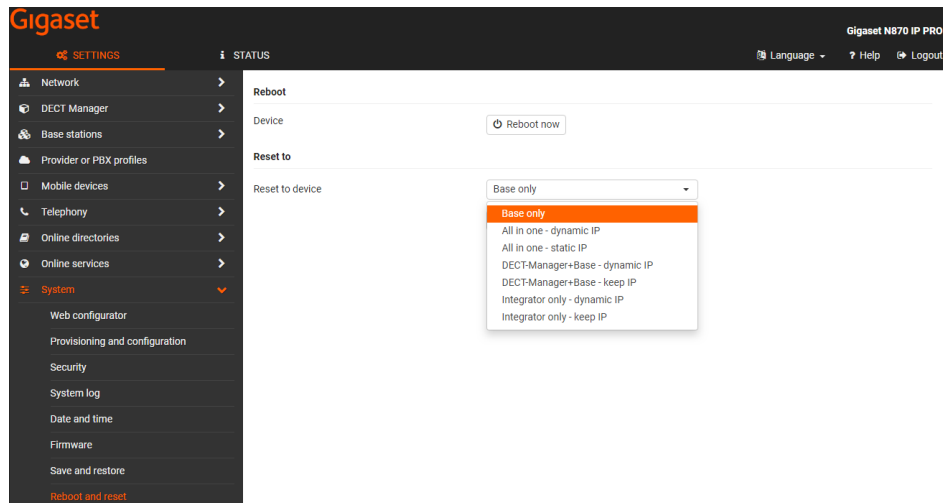

- Handover
- Roaming

When the N870 has the role of Integrator, it can never be an Manager or Base station.

The N870 in role integrator only can handle:

- Up to 4 DECT managers (N870)
- Up to 240 DECT Base stations
- Up to 800 handsets
- Handover, Roaming and Load balancing is supported

Each DECT Manager can:

- Up to 60 DECT Base stations
- Up to 250 DECT handsets

Subscribers can

- Accept or initiate calls in all DECT cells with there handset (Roaming)
- Switch between the DECT cells during a call (Handover).
- A handover is only possible if cells are synchronised.

Integrator role only

The N870 with the role integrator only allows you to use the N870 hardware to create an Large DECT multi-cell system with up to 4 DECT managers.

For each DECT manager you need to buy a [license](#).

The configuration of the Integrator is the same like already [described for the Virtual Integrator](#).

