FAQ 3CX - Auto-provisioning Maxwell

Introduction


Here we describe 'how to' provisioning a Gigaset Maxwell device behind a 3CX PBX.

Maxwell provisioning behind 3CX local PBX

We have a running 3CX system with configured users and you have added the provisioning template as described here: FAQ 3CX - Auto-provisioning templates


- Start with factory reset of the Maxwell device
- Maxwell will boot, and after boot sends a SIP Multicast

In the 3CX web-interface you can see under Phones the Maxwell device: -

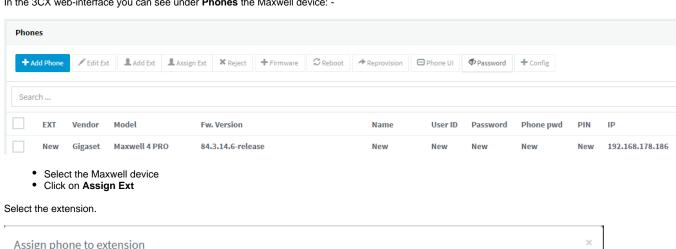



- Press OK
- Phone Provisioning page is opened
- Change the settings
- Press **OK**
- The Maxwell is configured via auto-provisioning

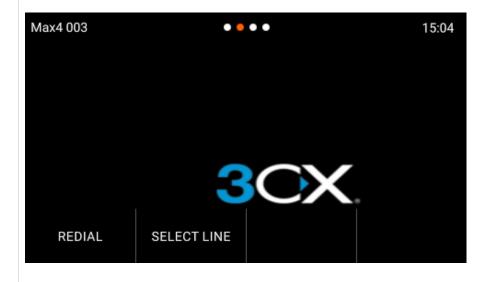


Maxwell provisioning behind 3CX cloud PBX

We have a running 3CX cloud system with configured users.


- Start with factory reset Maxwell device
- In the 3CX web-interface go to: Phones Add Phone
- Assign the Phone to extension
- Select the extension



- Press OK
- Add phone page is opened
- Select the Gigaset device and enter the MAC Address

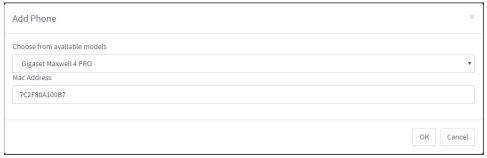

- Press OK
- Change the settings
- Select if you are using SBC or STUN
- Copy the **Provisioning Link**
- Press **OK**
- Open the web-interface of the Maxwell
 Go to: SETTINGS System Provisioning and Configuration
- Copy the provisioning URL into the field **Provisioning Server**

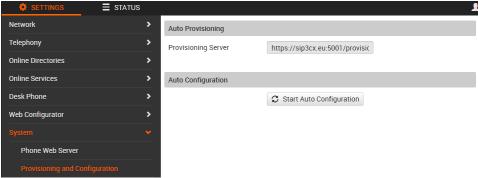

- Click on Start Auto Configuration
- The Maxwell is configured via auto-provisioning

