FAQ 3CX - Auto-provisioning Maxwell

Introduction

Here we describe 'how to' provisioning a Gigaset Maxwell device behind a 3CX PBX.

Maxwell provisioning behind 3CX local PBX

We have a running 3CX system with configured users and you have added the provisioning template as described here: FAQ 3CX - Auto-provisioning templates

- Start with factory reset of the Maxwell device
- Maxwell will boot, and after boot sends a SIP Multicast

In the 3CX web-interface you can see under Phones the Maxwell device: -

• Latter • Latter • Latter • Select the Maxwell 4 PR0 • New • New • New • New • New • New • New • New • New • New • New • New • New • New • New • New • New • New New New New	+ Add Phone Sedit Ext									
Search EXT Vendor Model FW. Version Name User ID Password Phore prod PIN IP New digaset Maxwell 4PR0 84.3.24.6-release New New New New New New 192.3.68.3.77 Select the Maxwell device Click on Assign Ext least the extension Cost Cancel Press OK Press OK Press OK Press OK Cancel Change the settings Press OK ELECT LINE ELECT LINE		Add Ext Ass	ign Ext 🗱 Reject 🕂 F	irmware ${\cal G}$ Reboot		🖻 Phone UI	Password	+ Config		
EXt Vender Model FW. Version Name User 10 Password Phone pued P14 19 New Gigast Maxwell 4PR0 64.3.14.6-release New	Search									
New Gigaet Maxwell 4PR0 84.3146-release New New New New New New New 192.168.174 • Select the Maxwell device • Click on Assign EX Next the extension * Choose Extension * 03 Max4 003 • • Press OK • • Press OK • • The Maxwell is configured via auto-provisioning • • The Maxwell is configured via auto-provisioning • • Max4 003 • • Extension • • Select the settings: • • Press OK • • Press OK • • The Maxwell is configured via auto-provisioning • • The Maxwell is configured via uuto-provisioning 15:04 • ELECT LINE • •	EXT Vendor	Model	Fw. Version		Name	User ID	Password	Phone pwd	PIN	IP
 ester the Maxwell device Otto a Assign Ext Ideation a Assign Provide the extension Assign phone to extension (and the extension) (block Extension) (clock Extension) 	New Gigaset	Maxwell 4 PRO	84.3.14.6-release		New	New	New	New	New	192.168.178.18
 ket the extension Assign phone to extension (hoose Extension (at a constrained of a start of a s	 Select the Max Click on Assig 	well device n Ext								
Assign phone to extension 03 Max4 003 • Press OK • Press OK • Change the settings • Press OK • The Maxwell is configured via auto-provisioning	lect the extension.									
 Assign priorite to extension Cancel OK Cancel Press OK Press OK Change the settings Press OK The Maxwell is configured via auto-provisioning 	Assign phone to out	tansion							×]
chorse Edension 003 Max4 003	Assign phone to ext	lension							~	-
 OX Max4 003 Press OK Phone Provisioning page is opened Cancel Change the settings Press OK The Maxwell is configured via auto-provisioning 	Choose Extension									
 Press OK Phone Provisioning page is opened Cancel Press OK The Maxwell is configured via auto-provisioning 	003 Max4 003								•	
 Nave Cancel Press OK Cancel Press OK Pr										-
 Press OK Phone Provisioning page is opened Change the settings Press OK The Maxwell is configured via auto-provisioning 								OK Ca	ncel	
REDIAL SELECT LINE	Change the set	ttings	eneu							
REDIAL SELECT LINE	Change the set Press OK The Maxwell is Iax4 003	ttings			11	5:04				
	 Change the set Press OK The Maxwell is Max4 003 	ttings	ito-provisioning		1	5:04				
	 Change the set Press OK The Maxwell is 	tings	ito-provisioning		1	5:04				

ell provisioning behind 3CX cloud PBX							
have a running 3CX cloud systen	n with configured users.						
 Start with factory reset Maximum In the 3CX web-interface go Assign the Phone to extern Select the extension 	vell device to: Phones - Add Phone I sion						
Assign phone to extension			×				
Choose Extension							
003 Max4 003			-				
		ок	Cancel				
 Press OK Add phone page is opened Select the Gigaset device a 	and enter the MAC Address						
Add Phone			×				
Choose from available models							
Gigaset Maxwell 4 PRO			Ŧ				
Mac Address							
7C2F80A100B7							
		ОК	Cancel				
 Change the settings Select if you are using SBC Copy the Provisioning Linit Press OK Open the web-interface of th Go to: SETTINGS - System Copy the provisioning URL i 	or STUN Me Maxwell - Provisioning and Config nto the field Provisioning Se XTUS Auto Provisioning	uration erver	ل				
Online Directories	Provisioning Server	https://sip3cx.eu:5001/provisic					
Online Services	Auto Configuration						
Desk Phone	>	C Start Auto Configuration					
Web Configurator	>	Contracto configuration					
System	•						
Phone Web Server Provisioning and Configuration							
 Click on Start Auto Configu The Maxwell is configured v 	iration ia auto-provisioning		1				

