

Gigaset pro

R700H PRO

N870 IP PRO DECT Multicell System

Up-to-date information on your product: → wiki.gigasetpro.com

Contents


Overview	3
Handset	3
Base	4
Illustration in the user guide	5
Safety precautions	6
Getting started	8
Contents of the package	8
Handset	8
Using the telephone	13
Getting to know your telephone	13
Making calls	17
Call lists	25
Message lists	26
Directories	27
Answering machine	33
Additional functions	34
Sound profiles	34
Calendar	35
Timer	37
Alarm clock	38
Protection against unwanted calls	39
Resource Directory	41
Bluetooth	42
Additional functions using the PC interface	44
Adjusting the telephone settings	46
Handset	46
Appendix	55
Customer Service & Help	55
Manufacturer's advice	55
Technical data	57
Accessories	59
Display icons	60
Menu overview	62
Open Source Software	64
Index	65



Not all of the functions described in the user guide are available in all countries.

Overview

Handset

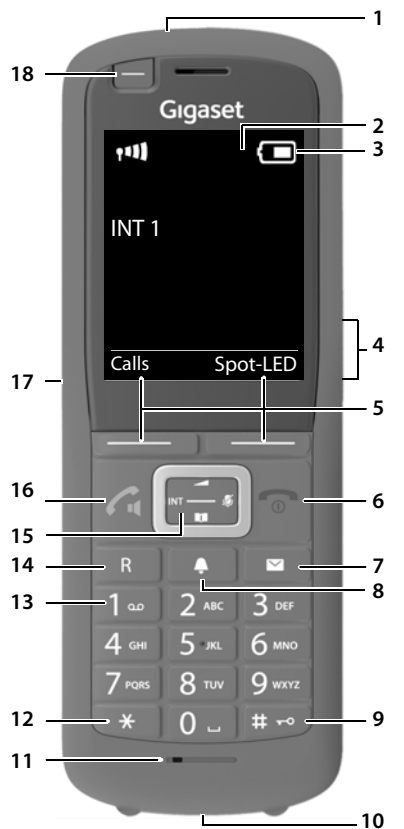

- 1 **Torch (spot LED) / Visual call signal**
- 2 **Display**
- 3 **Status bar** (→ p. 60)
Icons display current settings and operating status of the phone
- 4 **Volume keys** (→ p. 14)
for receiver/headset, ringtone, handsfree mode and appointment reminders
- 5 **Display keys** (→ p. 14)
Various functions, depending on the operating situation

- 6 **End call key / On/off key**
End call; cancel function
Go back one menu level
Return to idle status
▶ Press **briefly**
▶ Press and **hold**
▶ Press and **hold**
Switch the handset on/off (in idle status)
- 7 **Message key** (→ p. 26)
Access to the calls and message lists;
Flashes: new message or new call
- 8 **Profile key**
Switch between sound profiles
- 9 **Hash key**
Lock/unlock the keypad (in idle status) ▶ Press and **hold**
Toggle between upper/lower case and digits (when inputting text) ▶ Press **briefly**
- 10 **USB connection socket**
For data exchange between the handset and PC
- 11 **Microphone**
- 12 **Star key**
Open special characters table ▶ Press **briefly**
Switch between pulse dialling/ tone dialling (during existing connection) ▶ Press **briefly**
- 13 **Key 1**
Select network mailbox ▶ Press and **hold**
- 14 **Recall key**
Consultation call (flash) ▶ Press **briefly**
Insert a dialling pause ▶ Press and **hold**
- 15 **Control key / Menu key** (→ p. 13)
Open a menu; navigate in menus and entry fields; access functions (depending on the situation)
- 16 **Talk key / Handsfree key**
Accept call; dial number displayed; switch between receiver and handsfree mode
Open the redial list ▶ Press **briefly**
Start dialling ▶ Press and **hold**
- 17 **Headset connection**
(3.5 mm jack)
- 18 **Functions key** (→ p. 14)

Base

Your handset is registered with a N870 IP PRO Multicell System, that can comprise many base stations. When you move around with your handset within range of the multi-cell system, the handset automatically connects to the base station having the best connection (roaming). You can also move around freely during a call without the connection being interrupted (handover).

Information on starting and administration of base stations, and on registering a handset with a multi-cell system:

➔ User guide "N870 IP PRO - Installation, configuration and operation"






















Illustration in the user guide

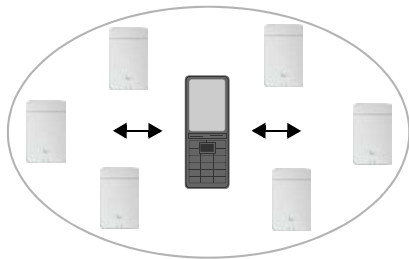




	Warnings, which if not heeded, can result in injury to persons or damage to devices.
	Important information regarding function and appropriate handling or functions that could generate costs.
	Prerequisite for being able to carry out the following action.
	Additional helpful information.










Keys

 or 	Talk key	 or 	Handsfree key
	End call key	 to 	Number / letter keys
 / 	Control key rim / centre		Message key
	Recall key		Star key
	Hash key		Profile key
OK, Back, Select, Change, Save, ...		Display keys	

Procedures

Example: Switching Auto answer on/off

▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶ **Auto Answer** ▶ **Change**  = activated)

Symbols	Meaning
▶ 	When in idle status press the centre of the control key. The main menu opens.
▶  	Navigate to the  icon using the control key  .
▶ OK	Select OK to confirm. The submenu Settings opens.
▶  Telephony	Select the Telephony entry using the control key  .
▶ OK	Select OK to confirm. The submenu Telephony opens.
▶ Auto Answer	The function to switch Auto answer on/off appears as the first menu item.
▶ Change	Select Change to activate or deactivate. Function is activated  /deactivated  .

Safety precautions



Read the safety precautions and the user guide before use.

Comprehensive user guides for all telephones and telephone systems as well as for accessories can be found online at gigasetpro.com in the Support category. We thereby help to save paper while providing fast access to the complete up-to-date documentation at any time.



The device cannot be used in the event of a power failure. In case of a power failure it is also **not** possible to make **emergency calls**.

Emergency numbers **cannot** be dialled if the **keypad/display lock** is activated!



Use only **rechargeable batteries** that correspond to the **specification** (see list of permitted batteries → www.gigaset.com/service). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. Rechargeable batteries, which are noticeably damaged, must be replaced.



The handset must not be operated if the battery cover is open.

Ensure that the batteries can not be short-circuited by objects in the battery compartment



Do not use the devices in environments with a potential explosion hazard (e.g. paint shops).



The devices are not splashproof. For this reason do not install them in a damp environment such as bathrooms or shower rooms.



Use only the power adapter indicated on the device.

Whilst charging, the power socket must be easily accessible.



Remove faulty devices from use or have them repaired by our Service team, as these could interfere with other wireless services.



Do not use the device if the display is cracked or broken. Broken glass or plastic can cause injury to hands and face. Send the device to our Service department to be repaired.



Keep small cells and batteries, which can be swallowed, out of the reach of children. Swallowing a battery can lead to burns, perforation of soft tissue and death. Severe burns can occur within 2 hours of swallowing. In the case of a swallowed cell or battery, seek medical care immediately.



Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery. If you use a medical device (e.g. a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy (for the specifications of your Gigaset product see "Technical data").



If a USB adapter cable is included, only use a USB power supply (5Volt) with USB-A connection. The use of other voltage sources e.g. PC's with USB connection can cause damage.

If a plug-in power supply is included, please use this power supply.

Getting started

Contents of the package

- One handset
- One battery cover (rear cover for the handset)
- One battery
- One charging cradle incl. power adapter
- One belt clip
- One rubber cover for the headset socket
- One rubber cover for the USB connection
- One user guide



The charging cradle is designed for use in closed, dry rooms within a temperature range of +5°C to +45°C.

Never expose the telephone to heat sources, direct sunlight or other electrical devices.

Protect your telephone from moisture, dust, corrosive liquids and vapours.

The device's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on furniture, contact marks on the surfaces cannot be completely ruled out.

This device is only suitable for a maximum installation height of 2 m.


Handset

Connecting the charging cradle

- ▶ Connect the flat plug of the power adapter **1**.
- ▶ Plug the power adapter into the power socket **2**.

To remove the plug from the charging cradle again:

- ▶ Disconnect the power adapter from the mains power supply.
- ▶ Press the release button **3**.
- ▶ Pull out the plug **4**.

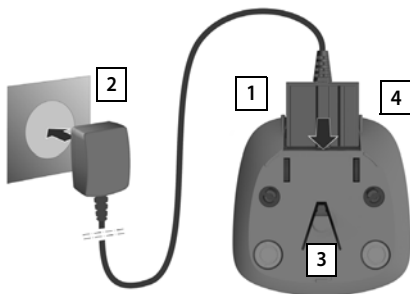


Setting up the handset for use

The display is protected by a plastic film. ▶ **Please remove the protective film!**

Inserting the batteries



Only use rechargeable batteries, as this could otherwise result in significant health risks and personal injury. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The device could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

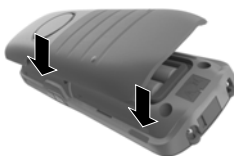

- ▶ Insert the batteries (for correct +/- direction, see diagram).
- ▶ Line up the battery cover at the recesses with the inside of the casing **3**.
- ▶ Press the cover until it clicks into place.
- To re-open the battery cover:
 - ▶ Remove the belt clip (if attached).
 - ▶ Use your fingernail to reach into the recess and pull the battery cover up **1**.


Covering the headset socket


- ▶ Plug the lug of the rubber cover for the headset socket into the opening on the left of the handset.
- ▶ Press down the cap of the rubber cover.



Charging the batteries

- ▶ Charge the batteries fully prior to first use in the charging cradle or using a standard USB mains adapter.



The batteries are fully charged when the power icon  disappears from the display.




The battery may heat up during charging. This is not dangerous.

After a time, the charge capacity of the battery will decrease for technical reasons.

Handsets contained in the package have already been registered to the base station. In the event that a handset is not registered however, (indicated by **Please register handset**), register the handset manually (→ p. 57).

As soon as power is applied to the handset, a Setup wizard starts.

Setting the display language

- ▶ Press the control key  until the language required is selected on the display, e.g. **English** ▶ press the display key **OK**

You can also change the display language later on in the **Settings** menu.

Deutsch

English

Français

Registering a handset

Register the handset with the Gigaset N870 IP PRO.



Registration must be initiated **both** on the Gigaset N870 IP PRO **and** on the handset. For this, the handset must be within range of the Gigaset N870 IP PRO.

On the Gigaset N870 IP PRO

- ▶ Start the registration process

Information for this:


→ User guide "N870 IP PRO - Installation, configuration and operation"

or: Contact the administrator of the DECT network.







On the handset

You require the 4-digit system PIN (registration code) generated on the Gigaset N870 IP PRO.

If the handset is not yet registered with a base:

- ▶ **Register** ... A search is performed for a base ready for registration ▶  Enter the system PIN ▶ **OK**

If the handset is already registered with a base:

- ▶  ▶ ... Use  to select  **Settings** ▶ **OK** ▶  **Registration** ▶ **OK** ▶  **Register Handset** ▶ **OK** ... A search is performed for a base ready for registration ▶  Enter the system PIN ▶ **OK**

Once registration is complete, the handset returns to idle mode. Shown on the idle display is the name set on the Gigaset N870 IP PRO for the handset (user name or display name). If it is not, repeat the procedure.

Your phone is now ready for use.



The handset can be registered with up to four base stations. Changing the base:

- ▶ ▶ ... Use to select **Settings** ▶ **OK** ▶ **Registration** ▶ **OK** ▶ **Select Base** ▶ **OK** ▶ **Select the base** ▶ **OK**

Some Gigaset bases and bases/routers from third party manufacturers might not be fully compatible with the handset and not all functions are displayed correctly. In such cases, use menu option **Basic Registration**. This guarantees correct displays on the handset, but can entail restrictions for some functions.

Attaching the belt clip

The handset has notches on each side for attaching the belt clip.

- Attaching the belt clip: ▶ Press the belt clip onto the back of the handset so that the tabs on the belt clip click into place in the notches.
- Removing the belt clip: ▶ Press the centre of the belt clip firmly with your right thumb. ▶ Push the nail of your left thumb up between the clip and the casing. ▶ Slide the clip upwards to remove.




Professional belt clip (accessory)

Attaching the belt clip:

Press the holder on the back of the handset so that the tabs click into place in the notches **1**.

- ▶ Secure the belt clip on the belt **2**.
- ▶ Hook in the handset with holder into the belt clip **3** and push it down **4**.

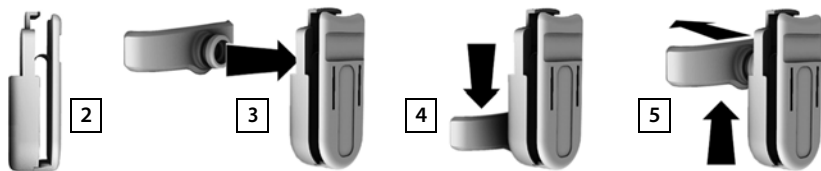

Removing the belt clip:

- ▶ Push the handset up and unhook it from the belt clip **5**.


Connecting the headset

- ▶ Remove the cover from the headset socket.
- ▶ Connect the headset with 3.5 mm jack to the left side of the handset **1**.

or

- ▶ Connect headset via Bluetooth (→ p. 42)

Setting the headset volume: → p. 48

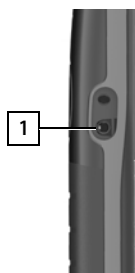

Connecting the USB data cable

For data exchange between the handset and PC:


- ▶ Connect the USB data cable with micro-USB plug into the USB socket at the bottom of the handset **1**.



i Connect the handset **directly** to the PC, **not** via a USB hub.

If you do **not** connect a USB cable, insert the rubber cover (provided) into the left of the opening to guarantee protection from splash water.

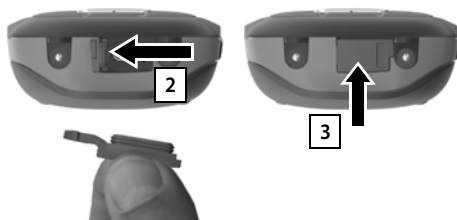

- ▶ Insert the lug of the rubber cover on the left of the opening **2**.
- ▶ Press down the cap of the rubber cover **3**.



Using the telephone


Getting to know your telephone


Switching the handset on/off

- Switch on: ▶ Press and **hold** the End call key  on the handset when switched off
- Switch off: ▶ When the telephone is in idle status, press and **hold** the End call key 

Locking/unlocking the keypad

The keypad lock prevents any accidental use of the telephone.

Lock/unlock the keypad: ▶  Press and **hold**

Keypad lock activated: the symbol  appears in the display.





If a call is indicated on the handset, the keypad automatically unlocks and you can accept the call. It then locks again when the call is finished.

Define emergency numbers that can be dialled even when the keypad lock is enabled: → p. 52

Control key



The control key enables you to navigate the menus and input fields, and also to call up certain functions depending on the situation.

In the description below, the side of the control key (up, down, right, left) that you have to press in the different operating situations is marked in black, e.g.  for "press right on the control key" or  for "press the centre of the control key".

When the phone is idle

Open the main menu

Open the list of available online directories (such as the central directory, the directory of a provider or a company directory)


Open the local directory:

Open the company directory

This function must be enabled on the Gigaset N870 IP PRO.

Set the voice volume for receiver / handsfree function

Set the microphone sensitivity



Press **briefly**

Press and **hold**



Press and **hold**

In submenus, selection and entry fields

Confirm a function

Navigate a line up/down

Select an option, move the cursor to the left/right



During a call

Open the list of available online directories (such as the central directory, the directory of a provider or a company directory)


Open the local directory:


Open company directory (if enabled)

Mute the microphone


Set the microphone sensitivity


Change the voice volume for receiver / handsfree function

 Press **briefly**

 Press and **hold**



 Press **briefly**



 Press and **hold**



The assignment of directories to the key  (press **briefly** or **for longer**) can be changed on the Gigaset N870 IP PRO.

Volume keys

Set volume for **receiver/headset, ringtone, handsfree mode** and indicating **appointments**: ▶

Press the volume keys  /  on the right side of the handset

Functions key



The Functions key can be assigned a function of your choice (**QuickDial / Send Key**).

▶ Press the key ... The function assigned is performed
Assign Functions key → p. 48

Display keys

The display keys perform a range of functions depending on the operating situation.



Current display key functions

Display keys

▶ Press the Display key ... The function assigned is performed

Display key icons → p. 60



The display keys have a function preset by default in idle status.

Changing the assignment: → p. 54

LED Torch

Use the phone as a torch. The spot LED is located on the top of the handset.

Activating the torch function

- ▶ Press the display key **LED torch**.

or

- ▶  ▶ ... use  to select  **Additional Features** ▶ OK ▶  **LED Torch** ▶ OK

Deactivating the torch function

- ▶ Press the display key **OFF**

or: after 2 minutes the function is automatically deactivated.


Menu guidance

The functions of your telephone are displayed in a menu that consists of several levels.

Menu overview → p. 62

Select/confirm functions


Confirm selection using

OK or press the centre of the control key 



One menu level back using

Back

Change to idle display using

 Press and **hold**



Switch function on/off using

Change on  / off 


Activate/deactivate option using

Select activated  / not activated 

Main menu

In idle status: ▶ Press the **centre** of the control key  ▶ ... use the control key  to select a submenu ▶ OK


Example

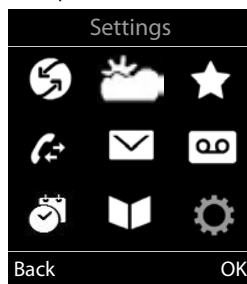

The main menu functions are shown in the display as icons. The icon for the selected function is highlighted in colour and the name of the associated function appears in the display header.

Submenus


The functions in the submenus are displayed as lists.

To access a function: ▶ ... use the control key  to select a function ▶ OK


Return to the previous menu level:


▶ Press the display key **Back**

or


▶ **Briefly** press the End call key 

Returning to idle status

▶ Press and **hold** the End call key 



 If no key is pressed, the display will **automatically** change to idle status after around 2 minutes.

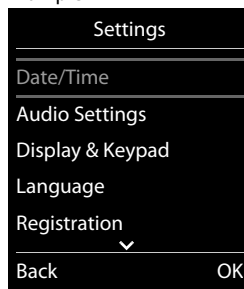Example





Entering text




Input position




- ▶ Use  to select an entry field. A field is activated when the cursor is blinking inside it. .
- ▶ Use  to move the position of the cursor.


Correcting incorrect entries


- Delete **characters** to the left of the cursor: ▶  Press **briefly**
- Delete **words** to the left of the cursor: ▶  Press and **hold**

Entering letters/characters

Multiple letters and numbers are assigned to each key between  and  and the  key. As soon as a key is pressed, the possible characters are displayed at the bottom of the display. The selected character is highlighted.

- Selecting letters/digits: ▶ Press the key **briefly** several times in succession
- Switch between lower case, upper case and number entry mode: ▶ Press the hash  key
When editing a directory entry, the first letter and each letter following a space is automatically in upper case.
- Entering special characters: ▶ Press the star key  ▶ ... use  to navigate to the desired character ▶ **Insert**

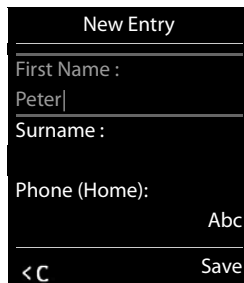

 The availability of special characters depends on the language setting.

Making calls

The base stations of the Gigaset N870 IP PRO together form the DECT wireless network of the phone system. You can initiate or answer calls on a handset across the whole wireless network and change base station during a call (handover).



The handset is located in the wireless cell of at least one of the base stations registered with the phone system.

The handset is assigned a send and receive connection.

If the Gigaset N870 IP PRO is connected to a phone system that permits groups to be formed, phone connections can also be assigned to groups. In such cases, you also receive calls on your handset that are sent to your group number.



The Gigaset N870 IP PRO uses for telephony a VoIP phone system or the services of a VoIP provider. The availability of some phone functions depends on whether they are supported by the phone system / provider and whether they have been enabled. Contact the operator of your phone system for a description of the features.



Depending on the specifications of your phone system, you may need to dial an area code for calls outside the region covered by your VoIP phone system.

When you use the fixed line network for calls, you might need (depending on provider / phone system) to dial the area code even for local calls. This is not necessary when the area code is entered in the phone configuration.

Making calls

▶ ... Use  to enter the number ▶  Press **briefly** the Talk key

or

▶  Press and **hold** the Talk key ▶ ... Use  to enter the number

The connection is established over the SIP link assigned to the handset.




Cancel dialling: ▶  Press the End call key





If the display backlight is deactivated, you can reactivate it by pressing any key. **Digit keys** that are pressed appear in the display for pre-dialling, **other keys** have no further function.

Dialling from the redial list











The redial list contains the 20 numbers last dialled with the handset.

▶  **Briefly** press the Talk key ... The redial list is opened ▶  Select the entry ▶ Press the Talk key 

If a name is displayed:







▶ **View** ... The number is displayed ▶ Use as required  to scroll through the numbers ▶ At the phone number required, press the Talk key 


Managing entries in the redial list


- ▶  Briefly press the Talk key ... The redial list is opened ▶  Select an entry ▶ **Options** ... Possible options:
 - Copy entry to directory:
 - ▶  **Copy to Directory** ▶ **OK**
 - Copy the number to the display:
 - ▶  **Display number** ▶ **OK** ▶ ... Use as required  to change or add ... Use  to save in the directory as a new entry
 - Delete the selected entry:
 - ▶  **Delete entry** ▶ **OK**
 - Delete all entries:
 - ▶  **Delete List** ▶ **OK**
 - Set automatic redial:
 - ▶  **Automatic Redial** ▶ **OK** ... The selected number is automatically dialled at fixed intervals (at least every 20 seconds). The handsfree key flashes, "open listening" is activated.
 - The participant answers: ▶  Press the Talk key ... The function is ended
 - The subscriber does not answer: The call is interrupted after around 30 secs. The function is terminated after pressing any key or after ten unsuccessful attempts.

Dialling from a call list

The call lists (→ p. 25) contain the most recent accepted, outgoing and missed calls.

- ▶  ▶ ... Use  to select  **Call Lists** ▶ **OK** ▶ ... Use  to select the list ▶ **OK** ▶ ... Use  to select an entry ▶  Press the Talk key








 The call lists can be displayed directly by pressing the display key **Calls** if the relevant function has been assigned to the display key.

The **Missed calls** list can also be opened by pressing the Message key .


One touch call

A predefined number is dialled by pressing **any** key. This allows children, who are unable to enter a number, to call a certain number for example.

Enabling one touch call mode:


- ▶  ▶ ... Use  to select  **Additional Features** ▶ **OK** ▶  **One-Touch Call** ▶ **OK** ▶ ... Use  to enable **Activation** ▶  **Call to** ▶ ... Use  to enter a number ▶ **Save** ... When the phone is in idle, the enabled one touch calling is displayed

Make a one touch call: ▶ Press any key ... the saved number is dialled

Cancel dialling: ▶ Press the End call  key.

End one touch call: ▶ Press and **hold** the  key

Example

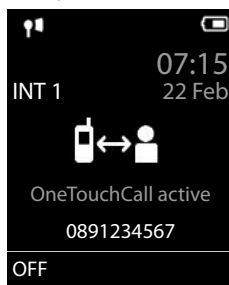


Dialling in extension systems (Delayed Extension Dialling)

When dialling into a large corporate network (PBX systems), it might be possible to dial an extension number directly after dialling the dial-up number.



The phone number can be saved in the directory as follows: Dial-in number, 2 stars, extension number (e.g. 1234567**128).

- ▶ Open the directory ▶ ... Use to select an entry ▶ Press the Talk key ... The phone dials the number in front of ** ... Possible options:
 - Dial a saved extension: ▶ **Dial Ext.** ... The phone dials the number after **
 - Dial a different extension: ▶ ... Use to enter the extension number ... The phone dials the number entered

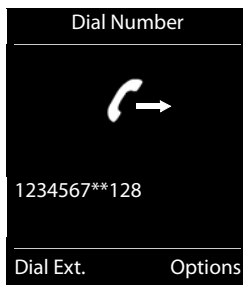

Enter a dial pause when dialling

- ▶ Press and hold the hash key ... A P is shown on the display

Initiating ringback

If the line of a called subscriber is busy, you can arrange for a ringback (if the phone system or provider supports the CCBS and CCNR services).

CCBS (Completion of Call to busy subscriber) Ringback when busy

CCNR (Completion of Calls on No Reply) Ringback when call is not answered

The service code for enabling/disabling CCBS and CCNR must be configured in the provider settings.


Enabling ringback:

- ▶ Enter the service code specified for the phone system / provider, e.g.


If you do not want a ringback, you can disable the function.

- ▶ Enter the service code specified for the phone system / provider, e.g.

Incoming calls

An incoming call for the connection assigned to your handset is indicated by ringing, by a display on the screen and by the flashing Talk / Handsfree key .

The signal light (LED) at the top of the handset also flashes (if enabled).

Accept the call: ▶ Press the Talk key  or ▶ **Accept**

If **Auto Answer** is enabled:

▶ Remove the handset from the charging cradle

Disable ringtone: ▶ **Silence** . . . You can accept the call as long as it is displayed on the screen

Reject the call: ▶ Press the End call key 

Information about the caller

If it is sent, the number of the caller is displayed. If the caller's number is saved in a directory, the name is displayed.

Using the Call Manager of the phone system

If a Call Manager is used on the phone system, it is possible to define that incoming calls are accepted directly by headset or handsfree function. This must be configured for the handset on the Gigaset N870 IP PRO.


Group accept

Accept incoming calls for a group of subscribers.

Group accept must be enabled, and the phone number or SIP URI of the group must be entered. This must be configured for the handset on the Gigaset N870 IP PRO.


Accepting/rejecting a waiting call during a call

During an external call, the call waiting tone signals that another party is trying to call you. The number or name of the caller is displayed if the phone number is sent.

Reject the call: ▶ **Options** ▶  **Reject waiting call** ▶ **OK**

Accept the call: ▶ **Accept** ▶ Speak to the new caller. The first call is placed on hold.


End the call, resume the call on hold:

▶ Press the End call key .

Calls with three parties


Consultation calls

During an external phone call, hold another external call. The first call is placed on hold.

- ▶ **Ext. Call** ▶ ... Use  to enter the number of the second party ... The active call is put on hold and the second party is called.

If the second party does not answer: ▶ **End**

Ending a consultation call


- ▶ **Options** ▶  **End active call** ▶ **OK** ... The connection to the first caller is reactivated.

or

- ▶ Press the End call key  ... The first party is called again.

Call swapping

Switching between two calls (call swapping). The other call is placed on hold.

- ▶ During an external call, dial the number of a second party (consultation call) or accept a waiting caller ... The display shows the numbers/names of both parties.
- ▶ The control key  enables you to switch between the parties.

Ending a currently active call

- ▶ **Options** ▶  **End active call** ▶ **OK** ... The connection to the other caller is reactivated.

or

- ▶ Press the End call key  ... The first party is called again.

Conference call

You can speak to two people simultaneously.

- ▶ During an external call, dial the number of a second party (consultation call) or accept a waiting caller ... Then:

Start the conference call:


- ▶ **Conf.** ... All the callers can hear each other and hold a call with each other.

Switching back to call swapping:

- ▶ **End Conf.** ... You are reconnected to the party with whom the conference call was initiated.



End call with both participants:

- ▶ Press the End call key 

Each party can end their participation in the conference call by pressing the End call key  or hanging up.

Transferring a call to another party

Transfer a call to another party (connect).

- ▶ Use the Display key **Ext. Call** to start an external consultation call ▶ ... Use  to enter the number of the second party ... The active call is put on hold ... The second party is called ▶ Press the End call key  (during the call or before the second party has answered) ... The call is forwarded to the second party.




The options for transferring calls must be set up correctly for the phone system.

During a conversation

Handsfree mode

Activating/deactivating handsfree mode during a call and when establishing a connection:

- ▶ Press the handsfree key 

Placing the handset in the charging cradle during a call:

- ▶ Press and hold down the handsfree key  ▶ ... Place the handset in the charging cradle ▶ ... hold  for a further 2 seconds

Call volume

Applies for the mode currently being used (handsfree, receiver or headset):


- ▶ Press  ▶ ... use  to set the volume ▶ **Save**




The setting is automatically saved after around 3 seconds, even if **Save** is not pressed.

Muting the microphone

When the microphone is switched off, callers will no longer hear you.

Switch the microphone on/off during a call: ▶ Press 

or: ▶ **Briefly** press the Profile key 

Adjust the microphone sensitivity

Adjust the microphone sensitivity for the receiver or wired headset during a call.

- ▶ Press and **hold** ▶ Use to set the required sensitivity ▶ **Save**

Changing without saving means the change only applies for the current call.

Permanent setting of the microphone sensitivity when the phone is idle:

- ▶ Press and **hold** ▶ Use to select **Earpiece / Corded headset** ▶ Use to set the sensitivity ▶ **Save**

or

- ▶ ... Use to select **Settings** ▶ **OK** ▶ **Audio Settings** ▶ **OK** ▶ **Mic Sensitivity** ▶ **OK** ▶ Use to select **Earpiece / Corded headset** ▶ Use to set the sensitivity ▶ **Save**

Set the acoustic profile to loud surroundings:

- ▶ Press and **hold** the button ▶ Use to set the sensitivity ▶ **Save**

Network services

Network services are dependent on the phone system and network provider.

To activate/deactivate the features, a code is sent to the telephone network.

Deactivating Calling Line Identification for the next call

By default for an outgoing call, the phone number is sent and can be shown with the caller on the display (CLIP = CLI Presentation). When the caller's number is withheld, it is not shown on the called party's display. The call is made anonymously.

- ▶ ... Use to select **Select Services** ▶ **OK** ▶ **Next Call Anonym.** ▶ **OK** ▶ ... Use to enter the number ▶ **Dial** ... The connection is established without CLI

Call divert

When call divert is enabled, incoming calls are forwarded to another connection.

- ▶ ... Use to select **Select Services** ▶ **OK** ▶ **Call Divert** ▶ **OK** ▶ **Select** when call divert is to apply ▶ **OK**

- All Calls:** Calls are forwarded immediately.
- No Answer:** Calls are diverted if no one accepts the call within several rings.
- When Busy:** Calls are diverted if the line is busy.

Enable/disable: ▶ **Status:** ... Use to select **On** or **Off**

Enter the number for call divert:

- ▶ **To Phone Number** ▶ ... Use to enter the number

Enable: ▶ **Send**

Call waiting

During a call, a call waiting tone indicates another caller. If the number is being transferred, you see the number or the name of the caller on the display.


Reject waiting caller: ▶ **Reject** ... The waiting caller hears the busy tone

Accepting a call: ▶ **Accept**

Once you have accepted the waiting call, you can switch between the two parties (**Call Swap**) or speak to them both at the same time (**Conference**).

Prevent/permit call waiting

▶  ▶ ... Use  to select  **Select Services** ▶ OK ▶  **Call Waiting** ▶ OK


Enable/disable: ▶ **Status:** ... Use  to select **On** or **Off**

Enable: ▶ **Send**

Do not put through call

When you do not want to be disturbed, you can arrange for no more calls to be put through.


▶  ▶ ... Use  to select  **Select Services** ▶ OK ▶  **Do Not Disturb** ▶ OK

Enable/disable: ▶ **Status:** ... Use  to select **On** or **Off**

Enable: ▶ **Send**


Cancelling ringback

After you have initiated a ringback, you can cancel it before the other party calls back.

▶  ▶ ... Use  to select  **Select Services** ▶ OK ▶  **Ringback Off** ▶ OK ... You receive a confirmation from the phone network ▶ Press the End call key 



You can only activate one ringback at a time. Activating a ringback will automatically cancel any ringback that is already active.

If the ringback is indicated before you are able to cancel it: ▶ Press the End call key 

Call lists

The telephone saves different types of calls (missed, accepted and outgoing calls) in lists.



To display the numbers of missed and received calls in the call lists, the relevant option must be enabled on the Gigaset N870 IP PRO.

List entry

The following information is displayed in the list entries:

- The list type (in the header)
- Icon for the type of entry:
 - Missed calls,
 - Accepted calls,
 - Outgoing calls (redial list)
- Caller's number. If the number is stored in the directory, the name and number type (Phone (Home), Phone (Office), Phone (Mobile)) are shown instead. In the event of missed calls, the number of missed calls from this number is also shown in square brackets.
- Connection by which the call was received/made
- Date and time of call (if set)

Example

All calls	
Frank	Today, 15:40 [3]
089563795	13.05.21, 18:32
Susan Black	12.05.21, 13:12
View	Options

Opening the call list

Via the display key: Calls select the list OK

Via the menu: ... use to select Call Lists OK select the list OK

Via the Message key (missed calls):

Press the Message key Missed Calls: OK

Calling back a caller from the call list

... use to select Call Lists OK select list OK select entry Press the Talk key

Additional options

... use to select Call Lists OK select list OK ... possible options:

View an entry: select entry View

Number into directory:

select entry Options Copy to Directory OK

Delete an entry: select entry Options Delete entry OK


Delete list: Options Delete List OK Yes

Message lists

Notifications about missed calls, messages on the network mailbox and missed alarms are saved in the messages list and can be shown on the handset display.

Which messages are shown on the handset are defined in the configuration of the handset on the Gigaset N870 IP PRO.

Counter for missed calls: When the option is enabled, the number of missed calls in idle mode is shown on the handset display.

Message Waiting Indicator (MWI): For every message type (missed call, missed alarm, new message on the network mailbox), the MWI can be disabled/enabled on the Gigaset N870 IP PRO. If the option is enabled, the LED on the Message key  flashes **when a new notification** arrives for a message type enabled.

Icons for message types and the number of new messages are shown on the idle display.

Notification for the following message types is available:

 on the network mailbox

 in the missed calls list

 in the missed alarms list




The icon for the network mailbox is always displayed, provided the number is stored in the telephone. The other lists are only displayed if they contain messages.

Display messages:

- ▶ Press the Message key  ... Messages lists that contain messages are displayed, **Mailbox:** is always displayed

An entry is marked in **bold**: new messages are available. The number of new messages is shown in brackets.

An entry is **not** marked in bold: no new messages. The number of old messages is shown in brackets.


- ▶  Select a list ▶ **OK** ... the calls or messages are listed

Network mailbox: The network mailbox number is dialled.



The message list contains an entry for every answer machine assigned to the handset, e.g. for a network mailbox.

Example

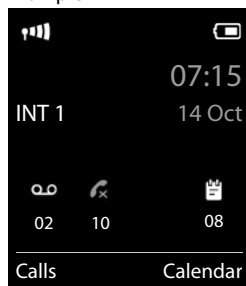

Example

Messages & Calls	
Missed Appts:	(2)
Missed Calls:	(5)
Mailbox:	(1)
Back	OK

Directories

The following directories are available:


- The (local) directory on the handset
- Company directories provided over a server
- Online directories made available by public providers

The local directory is always available. Which other directories are available is defined by Gigaset N870 IP PRO.

Open directories

Open directories with the Directory key

- ▶ Press the Directory key  (bottom of control key)




The  key is normally assigned as follows:

- Press **briefly** to open the selection of available online directories.
- Press and **hold** to open the local directory,

This assignment can be changed for every handset from the Gigaset N870 IP PRO. Direct access (press briefly) can be assigned to a specific online directory. In this case, open the local directory by pressing and holding the Directory key .

Opening directories via the menu

Local directory:

- ▶  ▶ ... Use  to select  **Directory** ▶ **OK**

List of all online directories set up on the phone system

- ▶  ▶ ... Use  to select  **Online Directory** ▶ **OK**

The directories are shown with the names specified on the Gigaset N870 IP PRO.

Opening the company directory using the INT key

A company directory is available if it has been set up on the Gigaset N870 IP PRO and when the phone system has access to this directory. The directory to open with the INT key can be set separately for every handset.

- ▶ Press the INT key  (left of control key)



It is not possible to transfer entries from the local directory to another handset.

Local handset directory

The local directory is unique to the handset.

Directory entries

- Number of entries: Maximum 200
- Information: First and last names, up to three phone numbers, anniversary with signalling, VIP ringtone with VIP icon
- Length of the entries: Numbers: max. 32 digits
First and last names: max. 16 characters

Creating an entry

- ▶ ▶ <New Entry> ▶ OK ▶ ... use to switch between the entry fields

Name:

- ▶ ... use to enter the first and/or last name

Numbers:

- ▶ Tel.1 - Type ▶ ... use to select a number type (Home, Office or Mobile) ▶ ▶ ... use to enter a number

Enter more numbers: ▶ use to toggle between the entry fields Tel.1 - Type/Tel.2 - Type/Tel.3 - Type ▶ ... use to enter a number

Anniversary:

- ▶ ... use to activate/deactivate **Anniversary** ▶ ... use to enter date and time ▶ ... use to select type of alert (**Visual only** or a ringtone)

Caller Melody (VIP):

- ▶ ... use to select the ringtone that will indicate a call from the participant ... if a **Caller Melody (VIP)** has been assigned, the entry will appear in the directory with the **VIP** icon.

Caller Picture:

- ▶ ... use to select a picture that is to be displayed during a call from the participant (→ Resource Directory).

Save entry: ▶ Save



The entry is only valid if it contains at least one number.

Example

New Entry	
First Name :	Robert
Surname :	
Tel.1 - Type:	
	Abc
< C	Save



For **Caller Melody (VIP)** and **Caller Picture**: the telephone number of the caller must be supplied.

Searching for/selecting a directory entry

▶ ▶ ... use to browse searched names

or

▶ ▶ ... use to enter initial letters (max. 8 letters) ... the display jumps to the first name starting with these initial letters ▶ ... use to continue browsing to the desired entry, if needed

Scroll through directory: ▶ ▶ Press and hold

Displaying/changing an entry

▶ ▶ ... use to select entry ▶ **View** ▶ ... use to select the field to be changed ▶ **Edit**

or

▶ ▶ ... use to select an entry ▶ **Options** ▶ **Edit entry** ▶ **OK**

Deleting entries

Delete the **selected** entry:

▶ ▶ ... use to select an entry ▶ **Options** ▶ **Delete entry** ▶ **OK**

Delete **all** entries: ▶ ▶ **Options** ▶ **Delete all** ▶ **OK** ▶ **Yes**

Setting the order of the directory entries

Directory entries can be sorted by first name or surname.

▶ ▶ **Options** ▶ **Sort by Surname / Sort by First Name**

If no name was entered, the default telephone number is shown in the surname field. These entries appear at the beginning of the list, regardless of how the entries are sorted.

The sort order is as follows:

Space | Digits (0-9) | Letters (alphabetically) | Other characters.

Displaying the number of entries available in the directory

▶ ▶ **Options** ▶ **Available Memory** ▶ **OK**

Copying number to the directory

Copy numbers to the directory:

- From a list e.g. the call list or the redial list When dialling a number



The number is displayed or highlighted.

▶ Press the display key or **Options** ▶ **Copy to Directory** ▶ **OK** ... possible options:

Create a new entry:


▶ **<New Entry>** ▶ **OK** ▶ ... use to select number type ▶ **OK** ▶ complete entry ▶ **Save**

Add number to an existing entry:






- ▶ ... use  to select an entry ▶ OK ▶ ... use  to select number type ▶ OK ... the number is entered or a prompt to overwrite an existing number is displayed ▶ ... if required, answer the prompt with Yes/No ▶ Save

Copying a vCard using Bluetooth

Copy directory entries in vCard format, e.g. to exchange entries with a mobile phone.




Bluetooth mode is activated
The other handset/mobile phone supports Bluetooth.


- ▶  ▶ ... use  to select an entry if needed ▶ Options ▶  Copy entry / Copy all ▶  vCard via Bluetooth ... the Known Devices list is displayed ▶ ... use  to select device ▶ OK

Receiving a vCard using Bluetooth

If a device in the **Known Devices** list sends a vCard to your handset, a directory entry is automatically created and a message is shown in the display.

If the sending device is not in the list: ▶ ... use  to enter the PIN of the **sending** Bluetooth device ▶ OK ... the copied vCard is available as a directory entry

Synchronising the phonebook with the PC address book (Gigaset QuickSync)



The Gigaset QuickSync programme has been installed on the computer.
The handset is connected via Bluetooth or via a USB data cable to the computer.

Free download and further information at → gigaset.com/quicksync

Company directory

If company directories (LDAP) are set up on the Gigaset N870 IP PRO, they are available on the handset with the following functions:


- Scroll through directory or search directory entries
- Show directory entries with details (no editing or deleting)
- Select phone numbers directly from the directory
- Transfer directory entries to the local directory

When a phone number is entered or there is an incoming call, a search of the directory is automatically performed for an entry matching the phone number. When an entry is found, the name is displayed instead of the phone number.

Show the company directory on the phone display

The company directory is assigned to the INT key: ▶ Press 




Depending on the setting on the Gigaset N870 IP PRO, you can also access a company directory from the directory key .

Directory entries

The following description is an example company directory display on a handset.

The menu shows all the directories that have been set up on the Gigaset N870 IP PRO and activated with the name assigned in each case. In the example on the right, the directory is displayed as **Our directory**.

▶  Select the directory ▶ **OK**

The phone performs a query on the LDAP server.


Directories	
Our directory	
Directory 3	
Directory 4	
Directory 5	
Directory 6	
Back	OK

Our directory	
Albert	
Bond	
Bond, Agnes	
Bond, Paul	
Brown, Susan	
View	Options


The directory is shown in accordance with the following rules:

- The search starts in the (sub)directory defined as the search basis on the LDAP server.
- The entries are listed in alphabetical order.
- Entries are displayed with **Surname** and **First name** when both attributes are available in the LDAP database. Otherwise only the last name or first name is displayed.


Search directory

▶ Use  to scroll through the directory

or

▶  Enter a name (or its starting letters)

As soon as you press a key on the keypad, the phone switches to search mode. You can enter up to 15 characters. All directory entries matching your entry are displayed.


Delete recent characters ▶ 

The current search term is shown in the topmost line.

b
Bond
Bond, Agnes
Bond, Paul
Brown, Susan
< C Options

br
Brown, Susan
< C Options

Displaying a directory entry


▶  Select the required entry


▶ Press **View** or 

or

▶ **Options** ▶ **View**


The directory entry is shown with detailed information.


▶  Scroll through entry

Close entry: ▶ **Back** or press the End call key 


Brown, Susan
Surname: Brown
First name: Susan
Phone (home): 1234567890
Back


Select a number from the directory

▶  Select the required entry

▶ Press the Talk key  ... If only one phone number is stored, it is dialled. If there are two or more numbers, they are shown in a selection list.

or

▶  Select the required phone number from the detailed view of the entry: **Phone (home)**, **Phone (office)** or **Phone (home)**

▶ Press the Talk key  ... The number is dialled

Brown, Susan
Phone (office): 0987654321
Phone (mobile): 0908987876
Street: Avenue 12
Back

Answering machine

The answering machine takes incoming calls for the handset.

Requirements

The following settings are required so that you can receive and listen to voice messages:

On the phone system

- ▶ A network mailbox is set up for the connection assigned to the handset.

On the Gigaset N870 IP PRO






- ▶ In the phone system configuration, the system for receiving notifications is registered for new messages on the network mailbox.

On the handset


- ▶ In the handset configuration, the phone number is entered and the network mailbox is enabled.

If necessary, contact the administrator of the DECT network.


Enter/change numbers from the handset

- ▶  ▶ ... Use  to select  Answer Machine ▶ OK ▶  Network Mailbox ▶ OK ▶  Enter or change the number of the network mailbox ▶ Save

Play messages on the handset


- ▶ Press and hold the  button

or

- ▶ Press the Messages  key ▶ OK

or



- ▶  ▶ ... Use  to select  Answer Machine ▶ OK ▶ Play Messages ▶ OK

Listen to announcement over speaker: ▶ Press the Speaker  button

Additional functions

Sound profiles


The telephone has sound profiles for adapting the handset to the environmental conditions: **Profile Loud**, **Profile Silent**, **Profile Personal**. You can use the **Do not disturb** profile to prevent the handset signalling an incoming call.

- ▶ Press the Profile key  ... The profile currently set is shown
- ▶ Switch between profiles using key 


or

- ▶ Use  to select a profile ▶ **OK**

Set the microphone sensitivity to loud surroundings:


- ▶ Press and **hold** the profile key 

Profile "Do not disturb"

- ▶ Set with the profile key 

or

- ▶  ▶ ... Use  to select  **Audio Settings** ▶ **OK** ▶  **Do Not Disturb** ▶ **Change**  = On)

- The idle display shows "**Do not disturb**" **active**. The status bar shows 
- Incoming calls are not signalled but show up in the call list as missed calls.
- Most messages are blocked. Exceptions: Appointments, alarm clock and anniversaries.




An incoming call occupies a line even if it is not signalled. If all the lines on the base are occupied, calls cannot be made.

Sound profiles

The profiles are set as follows by default:

Default setting		Profile Loud	Profile Silent	Profile Personal
Silent alert		On	Same as Profile Personal	Off
Ringtone		On	Off	On
Ringtone volume	Internal	5	Off	5
	External	5	Off	5
Handset volume	Receiver	5	3	3
	Handsfree	5	3	3
LED light for a call		Yes	No	No
Advisory tones	Key click	Yes	No	Yes
	Battery tone	Yes	Yes	Yes
	Confirmation tone	Yes	No	Yes

Activate alert tone for an incoming call for **Profile Silent**: ► after switching to **Profile Silent** press the display key **Beep** ... the icon  appears in the status bar



The set profile remains set when switching the phone off and back on.

Changes to the settings listed in the table:

- apply in the **Loud** and **Silent** profiles as long as the profile is not changed.
- are permanently saved in **Profile Personal** for this profile.

Calendar

You can remind yourself of up to **30 appointments**.

In the calendar, the current day is outlined in white; on days with appointments, the numbers are displayed in colour. When a day is selected, it will be outlined in colour.

June 2021						
Mo	Tu	We	Th	Fr	Sa	Su
				01	02	03
04	05	06	07	08	09	10
11	12	13	14	15	16	17
18	19	20	21	22	23	24
25	26	27	28	29	30	
Back						OK

Saving appointments to the calendar



Date and time have been set.

- ▶ ▶ ... use to select **Organizer** ▶ **OK** ▶ **Calendar** ▶ **OK** ▶ use to select desired day ▶ **OK** ... then
- Switch on/off: ▶ **Activation:** use to select **On** or **Off**
- Enter date: ▶ **Date** ... the selected day has been pre-set ▶ use to enter new date
- Enter time: ▶ **Time** ▶ use to enter hours and minutes of the appointment
- Set name: ▶ **Text** ▶ use to enter a description of the appointment (e.g. evening meal, meeting)
- Set alarm tone: ▶ **Signal** ▶ use to select the melody of the reminder alarm or deactivate the acoustic signal
- Save appointment: ▶ **Save**



If an appointment has already been entered: ▶ **<New Entry>** ▶ **OK** ▶ then enter information for the appointment.

Notification of appointments/anniversaries

Anniversaries are transferred from the directory and displayed as an appointment. An appointment/anniversary is displayed in idle status and the selected ringtone plays for 60 seconds as a notification.

Acknowledge and stop the reminder: ▶ Press the display key **OFF**



During a call, a reminder is indicated on the handset **once** with an advisory tone on the handset.

Displaying missed appointments/anniversaries

The following appointments and anniversaries are saved in the **Missed Appts** list:

- The appointment/anniversary call was not acknowledged.
- The appointment/anniversary was notified during a phone call.
- The handset was switched off at the time of the appointment/anniversary.

The last 10 entries are stored. The icon and the number of new entries are shown in the display. The most recent entry appears at the top of the list.

Opening the list

- ▶ Press the Message key  ▶  Missed Appts: ▶ OK ▶ ... use  to browse through the list of any appointments







or

- ▶  ▶ ... use  to select  Organizer ▶ OK ▶  Missed Appts ▶ OK

Each entry is displayed with the number or name, date and time. The most recent entry appears at the top of the list.

- Delete an appointment/anniversary: ▶ Delete

Displaying/changing/deleting stored appointments

- ▶  ▶ ... use  to select  Organizer ▶ OK ▶  Calendar ▶ OK ▶ use  to select day ▶ OK ... the appointment list is displayed ▶ use  to select date ... possible options:

Display appointment details:

- ▶ View ... the appointment settings are displayed

Change appointment:


- ▶ View ▶ Edit
or ▶ Options ▶  Edit entry ▶ OK

Activate/deactivate appointment:

- ▶ Options ▶  Activate/Deactivate ▶ OK








Delete appointment: ▶ Options ▶  Delete entry ▶ OK


Delete all appointments for a day:

- ▶ Options ▶  Delete all Appoints. ▶ OK ▶ Yes

Timer

Setting the timer (countdown)

- ▶  ▶ ... use  to select  Organizer ▶ OK ▶  Timer ▶ OK ▶ ... then
 - Enable/disable: ▶ Activation: ... use  to select On or Off
 - Set the duration: ▶  Duration ... use  to enter the hours and minutes for the timer
Min.: 00:01 (one minute); Max.: 23:59 (23 hours, 59 minutes)
 - Save the timer: ▶ Save

The timer starts the countdown. In the idle display, icon  and the remaining hours and minutes are displayed until one minute is left. From this point, the remaining seconds are counted down. At the end of the countdown, the alarm is triggered.

Disabling/repeating the alarm

- Switch off the alarm: ▶ **OFF**
- Repeat the alarm: ▶ **Restart** ... the timer display is displayed again ▶ set another duration as required ▶ **Save** ... the countdown is restarted

Alarm clock



Date and time have been set.

Activating/deactivating the alarm clock and setting the wake-up time

- ▶ ▶ ... use to select **Organizer** ▶ **OK** ▶ **Alarm Clock** ▶ **OK** ... then
- Switch on/off: ▶ **Activation:** ... use to select **On** or **Off**
- Setting the wake-up time:
- ▶ **Time** ▶ ... use to enter hours and minutes
- Set days: ▶ **Occurrence** ▶ ... use to switch between **Monday-Friday** and **Daily**
- Set the volume: ▶ **Volume** ▶ ... use to set volume in 5 levels s or select **crescendo** (increasing volume)
- Set alarm: ▶ **Melody** ▶ ... use to select a ringtone for the alarm
- Save settings: ▶ **Save**

When the alarm clock is activated, the icon and the wake-up time are displayed in idle display.

Alarm

An alarm is shown on the display and indicated by the selected ringtone melody. The alarm sounds for 60 seconds. If no key is pressed, the alarm is repeated after 5 minutes. After the second repetition, the alarm call is deactivated for 24 hours.



During a call, the alarm is only indicated by a short tone.

Switching off/repeating the alarm after an interval (snooze mode)

Deactivate the alarm: ▶ **OFF**

Repeat the alarm (snooze mode): ▶ Press **Snooze** or any key ... the alarm is switched off and repeated after 5 minutes.

Protection against unwanted calls

Time control for external calls



Date and time have been set.

Enter a time period during which the handset should suspend ringing to indicate external calls e.g. during the night.


- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Audio Settings** ▶ OK ▶ **Ringtones (Handset)** ▶ OK ▶ **Time Control** ▶ OK ▶ ... then

Switch on/off: ▶ use to select **On** or **Off**

Enter time: ▶ use to switch between **Suspend ring. from** and **Suspend ring. until** ▶ ... use to enter start and end in 4-digit format

Save: ▶ **Save**

Example

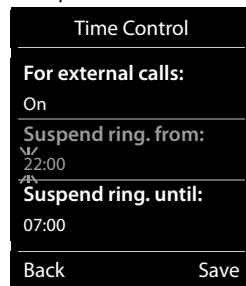

The time control only applies to the handset for which the setting is configured.

The telephone will continue to ring for numbers that have been assigned to a VIP group in the directory.

Protection from anonymous callers

The handset will not ring if callers' numbers are not revealed.

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Audio Settings** ▶ OK ▶ **Ringtones (Handset)** ▶ OK ▶ **Anon. Calls Silent** ▶ **Edit** (= on) ... the call is only signalled on the display

Switch off ringtone when in charging cradle

The handset will not ring when placed in the charging cradle. The call is only indicated on the display.

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Audio Settings** ▶ OK ▶ **Ringtones (Handset)** ▶ OK ▶ **Silent Charging** ▶ **Change** (= ringtone is switched off when in charging cradle)

Disable the ringtone (do not disturb)

You can use the **Do Not Disturb** function to prevent the handset signalling an incoming call.

▶  ▶ ... Use  to select  **Audio Settings** ▶ OK ▶  **Do Not Disturb** ▶ Edit
( = enabled)

- The idle display shows "**Do not disturb**" active.
- Incoming calls are not signalled but show up in the call list as missed calls.
- Most messages are blocked. Exceptions: Appointments, alarm clock and anniversaries.



An incoming call occupies a line even if it is not signalled. If all the lines on the base are occupied, calls cannot be made.

Resource Directory
















Sounds for ringtones and images that can be used as caller pictures (CLIP pictures) or as a screensaver are saved in the handset's resource directory. A range of monophonic and polyphonic sounds and pictures have been pre-set but further images and sounds can be downloaded using a PC (→ Gigaset QuickSync).

Media types:

Type	Format
Sound Ringtones Monophonic Polyphonic Imported sounds	Internal Internal Internal WMA, MP3, WAV
Picture CLIP-picture Screensaver	BMP, JPG, GIF 128 x 86 pixels 128 x 160 pixels

If insufficient memory is available, you must delete one or more pictures or sounds before others can be saved.

Managing images (for screensaver and CLIP) and sounds






- ▶  ▶ ... use  to select  **Additional Features** ▶ **OK** ▶  **Resource Directory** ▶ **OK**
... possible options:
 - View image: ▶  **Select Screensavers / Caller Pictures** ▶ **OK** ▶ use  to select picture ▶ **View** ... the selected picture is displayed
 - Play sound: ▶  **Select Sounds** ▶ **OK** ▶ use  to select sound ... the selected sound is played
Set volume: ▶ **Options** ▶ **Volume** ▶ **OK** ▶ use  to select volume ▶ **Save**
 - Rename picture/sound:
 - ▶  **Select Screensavers / Caller Pictures / Sounds** ▶ **OK** ▶ ... use  to select sound/image ▶ **Options** ▶ **Rename** ▶ use  to delete name, use  to enter new name ▶ **Save** ... the entry is saved with the new name
 - Delete picture/sound:
 - ▶  **Select Screensavers / Caller Pictures / Sounds** ▶ **OK** ▶ use  to select sound/picture ▶ **Options** ▶ **Delete entry** ... the selected entry is deleted



The relevant options are not available if a picture/sound cannot be deleted.

Check memory

Display the available memory for screensavers and CLIP-pictures.

- ▶  ▶ ... use  to select  **Additional Features** ▶ OK ▶  **Resource Directory** ▶ OK ▶  **Capacity** ▶ OK ... the percentage of available memory is displayed

Bluetooth

The handset is able to use Bluetooth™ to communicate wirelessly with other devices that also use this technology, e.g. to connect a Bluetooth headset or hearing aid.



Bluetooth is activated and the devices have been registered to the handset.

The following devices can be connected:

- A Bluetooth headset or hearing aid



The headset / hearing aid has the **Headset** or **Handsfree profile**. If both profiles are available, the handsfree profile is used to communicate.

It may take 5 seconds to establish a connection to the headset, whether a call is accepted using the headset or transferred to the headset, or a call is made from the headset.

- Up to 5 data devices (PCs, tablets or mobile phones) for the transmission of address book entries as a vCard or for the exchange of data with the computer.


In order for telephone numbers to be used further, the area code (international and local area code) must be saved to the telephone.

Operating Bluetooth devices → device user guides

Activating/deactivating Bluetooth mode

- ▶  ▶ ... use  to select  **Bluetooth** ▶ OK ▶  **Activation** ▶ **Change** = activated)

If the local area code is still not saved: ▶ ... use  to enter local area code ▶ OK

When in idle status, the activated Bluetooth mode is indicated on the handset by the  icon.

Registering Bluetooth devices

The distance between the handset in Bluetooth mode and the active Bluetooth device (headset or data device) should not exceed 10 m.



The registration of a headset overwrites a previously registered headset.

If a headset is to be registered that is already registered with a different device, this connection must be deactivated before registering.

- ▶ ▶ ... use to select **Bluetooth** ▶ **OK** ▶ **Search for Headset / Search Devices** ▶ **OK** ... the search starts (may take up to 30 seconds) ... the names of found devices are displayed ... possible options:

Register device: ▶ **Options** ▶ **Trust Device** ▶ **OK** ▶ ... use to enter the PIN of the Bluetooth device to be registered ▶ **OK** ... the device is added to the list of known devices

Showing information:

- ▶ ... use to select a device, if applicable ▶ **View** ... the device name and device address are displayed

Repeat search: ▶ **Options** ▶ **Repeat Search** ▶ **OK**

Cancel search: ▶ **Cancel**

Editing the list of known (trusted) devices

Open the list

- ▶ ▶ ... use to select **Bluetooth** ▶ **OK** ▶ **Known Devices** ▶ **OK** ... the known devices are listed, an icon indicates the type of device

Bluetooth headset

Bluetooth data device

If a device is connected, the relevant icon is shown in the display header instead of .

Edit an entry

- ▶ ▶ ... use to select **Bluetooth** ▶ **OK** ▶ **Known Devices** ▶ **OK** ▶ ... use to select entry ... possible options:

View an entry: ▶ **View** ... the device name and device address are displayed ▶ Press **OK** to go back

De-registering a device:

- ▶ **Options** ▶ **Delete entry** ▶ **OK**



Edit name: ▶ **Options** ▶ **Edit Name** ▶ **OK** ▶ ... use to edit name ▶ **Save**



If an active Bluetooth device is de-registered, it may try to re-connect as a "non-registered device".

Rejecting/accepting a non-registered Bluetooth device

If a Bluetooth device that is not registered in the list of known devices tries to connect to the handset, a prompt will appear asking you to enter the PIN of the Bluetooth device (Bonding).






- Reject: ▶ **Briefly** press the End call key 
- Accept: ▶ ... use  to enter the PIN of the Bluetooth device to be accepted ▶ **OK** ▶ ... Wait for PIN confirmation ... then

Add the device to the list of known devices: ▶ **Yes**

use the device temporarily: ▶ **No** ... the Bluetooth connection can be used, as long as the device is located within transmission range or until it is switched off

Changing the Bluetooth name of the handset

The handset is shown by this name on another Bluetooth device.

- ▶  ▶ ... use  to select  **Bluetooth** ▶ **OK** ▶  **Own Device** ▶ **OK** ... the name and the device address are shown ▶ **Change** ▶ ... use  to change the name ▶ **Save**

Additional functions using the PC interface



The **Gigaset QuickSync** program has been installed on the computer.

Free to download at → www.gigaset.com/quicksync

QuickSync functions:

- Sync the handset's directory with Microsoft® Outlook®
 - Upload CLIP-pictures (.bmp) from the computer to the handset
 - Upload pictures (.bmp) as screensavers from the computer to the handset
 - Upload sounds (ringtone melodies) from the computer to the handset
 - Update firmware
 - Cloud synchronisation with Google™
- ▶ Connecting the handset to the computer via Bluetooth or via a USB data cable.



Connect the handset **directly** to the PC and **not** via a USB hub.

Transferring data



Data transfer using Bluetooth:

- The computer has Bluetooth capability.
- A USB data cable is not plugged in. If a USB data cable is plugged in during an existing Bluetooth connection, the Bluetooth connection is interrupted.

- ▶ Launch the **Gigaset QuickSync** program on the computer.

The message **Data transfer in progress** is shown on the display during data transfer between the handset and PC. During this time, it is not possible to enter any data using the keypad and incoming calls are ignored.

Carrying out a firmware update



- ▶ Connect the telephone and the PC using a **USB data cable** ▶ Launch **Gigaset QuickSync** ▶ Establish connection to the handset
- ▶ Start firmware update in **Gigaset QuickSync** . . . Information about this can be found in **Gigaset QuickSync** help feature

The update process may take up to 10 minutes (not including download time).



Do not interrupt the process and do not remove the USB data cable.

The data are first downloaded from the online update server. The time required for this depends on Internet connection speed.



The display on your telephone is switched off, the Message key  and the Talk key  flash. Once the update is complete, your telephone will automatically restart.

Procedure in the event of an error

If the update procedure fails or the telephone no longer functions properly after the update, repeat the update procedure:

- ▶ End the **Gigaset QuickSync** program on the PC ▶ Remove the USB data cable from the telephone ▶ Remove the battery ▶ Re-insert the battery
- ▶ Carry out the firmware update again as described above

If the update procedure fails more than once or it is no longer possible to connect to the PC, carry out the **Emergency Update**:

- ▶ End the **Gigaset QuickSync** program on the PC ▶ Remove the USB data cable from the telephone ▶ Remove the battery
- ▶ Press and hold keys **4** and **6** at the same time with the forefinger and middle finger ▶ Replace the battery
- ▶ Release keys **4** and **6** . . . the Message key  and the Talk key  will flash alternately
- ▶ Carry out the firmware update as described above









Always save pictures and sounds uploaded onto the handset on the PC, as they are deleted during an **Emergency Update**.





Adjusting the telephone settings

Handset

Changing the language








- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Language** ▶ OK ▶ ... use  to select language ▶ **Select** ( = selected)

If the handset has been set to an incomprehensible language:

- ▶  ▶ Press the keys   **slowly** one after the other ▶ ... use  to select the correct language ▶ press the right display key

Select country (if available)







Select the country where you are using the phone. Your selection is used for country-specific defaults, such as the international country code.

- ▶  ▶ ... Use  to select  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶  **Country** ▶ OK ▶ ... Use  to select the country ▶ **Select** ( = selected)

Display and keypad

Screensaver

A digital or analogue clock, Info Services and a range of pictures can be selected to be displayed as a screensaver when in idle status.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Display & Keypad** ▶ OK ▶  **Screensaver** ▶ **Edit** ( = on) ... then

Switch on/off: ▶ **Activation:** ... use  to select **On** or **Off**

Select screensaver: ▶  **Selection** ▶ ... use  to select a screensaver (**Digital Clock / Analog Clock / Info Services / <Pictures> / Slideshow**)

View screensaver: ▶ **View**


Save selection: ▶ **Save**

The screensaver is activated approx. 10 seconds after the display has changed to idle status.



All pictures from the **Screensaver** folder of the **Resource Directory** are available for selection.

End screensaver

- ▶ Press the End call key  **briefly** ... the display changes to idle status

Notes on displaying Info Services



Info Services are activated via the web configurator.

The telephone is connected to the Internet.



If no information is currently available, the digital time (**Digital Clock**) is displayed instead until information is available again.

Switching Info Services on/off

The text information from the Internet that is set for the screensaver **Info Services** can be displayed as a scrolling message in idle status.

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Display & Keypad** ▶ OK ▶ **Info Ticker** ▶ **Edit** = on)

The text appears as soon as the telephone changes to idle status. If a message is shown in the display, the info text is not displayed.

Large font

Show text and icons in call lists and in the directory in a larger size in order to improve legibility. Only one entry is shown in the display and names are abbreviated if necessary.

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Display & Keypad** ▶ OK ▶ **Large Font** ▶ **Change** = on)

Colour scheme

You can choose from a range of colour combinations for the display.

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Display & Keypad** ▶ OK ▶ **Colour Schemes** ▶ OK ▶ ... use to select the desired colour scheme ▶ **Select** = selected)

Display backlight

The display backlight always illuminates when the handset is taken out of the base station/charging cradle or when a key is pressed. Any **digit keys** that are pressed appear on the display for pre-dialling.

Switch the display backlight on/off when in idle status:

- ▶ ▶ ... Use to select **Settings** ▶ OK ▶ **Display & Keypad** ▶ OK ▶ **Display Backlight** ▶ OK ▶ Use to select when the setting is applied (**In Charger / Out of Charger / In Talk State**) ▶ Select in each case with **On or Off** ▶ **Save**



The handset's standby time may be significantly reduced if the display backlight is switched on.

Keypad illumination

The keypad has 5 levels of brightness to choose from.

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Display & Keypad** ▶ OK ▶ **Key Illumination** ▶ OK ▶ ... use to select **Brightness (1 - 5)** ▶ **Save**

Activating/deactivating automatic keypad lock

Automatically lock the keypad when the handset has been in idle status for around 15 seconds.

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Display & Keypad** ▶ OK ▶ **Auto Keypadlock** ▶ **Change** = on)

Assigning the Functions key

Assign one of the following functions to the Functions key in the top left of the handset.

QuickDial The phone number assigned to the key is dialed.

Send Key A phone number previously entered from the keypad (or selected in a call list or the directory) is dialed.



- ▶ ▶ ... Use to select **Settings** ▶ OK ▶ **Display & Keypad** ▶ OK ▶ **Feature Key** ▶ OK ... then

Enable/disable: ▶ **Activation:** Use to select **On** or **Off**

Specify whether the Functions key is also locked when the keypad lock is enabled, or it stays enabled:

- ▶ **Keypad locked** ▶ Use to select **Key active** or **Key inactive**

To select a function: ▶ **Function** ▶ ... Use to select a function

Save the selection: ▶ **Save**

Using the Functions key → p. 14

Tones and signals

Call volume

You can set the volume of the earpiece, handsfree function and headset on 5 levels independently of each other.






Changes are only saved permanently in **Profile Personal**.







During a conversation

- ▶ **Handset Volume** ▶ ... use to select volume ▶ **Save** ... the setting is saved


In idle status

- ▶  **Handset Volume** ▶ Use  to select what the setting is to apply for (**Earpiece / Speaker / Corded headset**) ▶ Use  to select the volume ▶ **Save ...** The setting is saved










or

- ▶  ▶ ... Use  to select  **Settings** ▶ **OK** ▶  **Audio Settings** ▶ **OK** ▶ **Handset Volume** ▶ **OK** ▶ Use  to select what the setting is to apply for (**Earpiece / Speaker / Corded headset**) ▶ Use  to set the volume ▶ **Save**

Automatic volume control







 Crescendo is **not** set for the ringtone volume (→ p. 50).

The phone is able to automatically adjust the volume of the receiver and ringtone to the ambient volume. Here you can set the sensitivity with which the phone reacts to changes in noise level (**Very High, High, Medium, Low, Very Low**).

- ▶  ▶ ... Use  to select  **Settings** ▶ **OK** ▶  **Audio Settings** ▶ **OK** ▶  **Smart Volume** ▶ **OK** ▶  **Earpiece Volume / Ringtone Volume** ▶ **Edit**
- Enable/disable: ▶ **Activation:** Use  to select **On** or **Off**
- Adjust the sensor: ▶  **Sensitivity** ▶ Use  to adjust the sensor sensitivity
- Save: ▶ **Save**







Headset – volume correction

Change the call volume for the wired headset. In addition to the standard settings for the call volumes, here you can compensate the audio setting characteristics of your headset.

- ▶  ▶ ... Use  to select  **Settings** ▶ **OK** ▶  **Audio Settings** ▶ **OK** ▶  **Corded Hdst Boost** ▶ Use  to set the volume ▶ **Save**

Microphone sensitivity

Adjust the sensitivity of the microphone for the receiver or wired headset. This gives you improved acoustics in loud environments and when there are echoes.

- ▶  ▶ ... Use  to select  **Settings** ▶ **OK** ▶  **Audio Settings** ▶ **OK** ▶ **Mic Sensitivity** ▶ **OK** ▶ Use  to select what the setting applies for (**Earpiece / Corded headset**) ▶ Use  to adjust the sensitivity ▶ **Save**

Earpiece and handsfree profile

Select a profile for the **earpiece** and **handsfree mode** in order to adapt the telephone as much as possible to the surroundings. Check which is the most comfortable profile for you and your caller.

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Audio Settings** ▶ OK ▶ **Acoustic Profiles** ▶ **Earpiece Profiles / Handsfree Profiles** ▶ OK ▶ use to select profile ▶ Select = selected)

Earpiece Profiles: **High frequency** or **Low frequency** (default setting)

Handsfree Profiles: **Standard** (default setting) or **Reduced Echo**

Ringtones

Ringtone volume

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Audio Settings** ▶ OK ▶ **Ringtones (Handset)** ▶ OK ▶ **Volume** ▶ OK ▶ use to select **For internal calls and alarms** or **External Calls** ▶ use to set volume in 5 levels or in crescendo mode (increasing volume) ▶ **Save**

Example



- Changes are only saved permanently in **Profile Personal**.

Ringtone melody

Set different ringtones for internal and external calls.

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Audio Settings** ▶ OK ▶ **Ringtones (Handset)** ▶ OK ▶ **Melodies** ▶ OK ▶ use to select the connection ▶ use to select the ringtone/melody in each case ▶ **Save**

Switching the ringtone on/off

Switching the ringtone off permanently

- ▶ Use the key to set the **Profile Silent** ... The following icon appears in the status bar: or: Enable "Do not disturb"

- ▶ ▶ ... Use to select **Audio Settings** ▶ OK ▶ **Do Not Disturb** ▶ **Change** = enabled)

Switching the ringtone on permanently

Use the key to set **Profile Loud** or **Profile Personal**


Switching the ringtone off for the current call

- ▶ **Silence** or press the End call key

Switching the alert tone (beep) on/off







Switch on an alert tone (beep) instead of the ringtone:

- ▶ Use the Profile key to select  **Profile Silent** ▶ Press **Beep** within 3 seconds ... The following is shown in the status bar: 

Switching off the alert tone: ▶ Use the Profile  key to change profile





Switching the silent alert on/off

Incoming calls and other messages are indicated by a silent alert.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶  **Silent Alert** ▶ Change ( = on)

Switching advisory tones on/off



The handset notifies acoustically about different activities and statuses. These advisory tones can be switched on/off independently of each other.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶  **Advisory Tones** ▶ OK ... then



Tone when keys are pressed:

- ▶ **Key Tones:** ... use  to select **On** or **Off**



Confirmation/error tone after making entries, advisory tone when a new message has been received:

- ▶  **Confirmation** ▶ ... use  to select **On** or **Off**

Warning tone when there are fewer than 10 minutes of talktime remaining (every 60 seconds):

- ▶  **Battery** ▶ ... use  to select **On** or **Off**

Warning tone when the handset is moved out of range of the base station:






- ▶  **Out of Range:** ... use  to select **On** or **Off**


Save settings:

- ▶ **Save**

Auto answer







When Auto answer is enabled, the handset accepts an incoming call as soon as it is removed from the charging cradle.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶ **Auto Answer** ▶ **Change** ( = activated)

Regardless of the **Auto Answer** setting, the connection ends as soon as you place the handset back in the charging cradle. Exception: Press and hold the handsfree key  for a further 2 seconds while placing the handset in the charging cradle.

Activating/deactivating visual call signal

Visual indication of incoming calls via the spot LED (e.g. in noisy environments).










- ▶  ▶ ... use  to select  Settings ▶ OK ▶  Telephony ▶ OK ▶  LED Call Signal ▶ Change ( = on)




Changes are only saved permanently in **Profile Personal**.

Emergency numbers




You can enter up to three phone numbers as emergency numbers - that you can also dial when the keypad lock is PIN-protected.

- ▶  ▶ ... Use  to select  Settings ▶ OK ▶  Telephony ▶ OK ▶  Emergency Numbers ▶ OK ▶ Use  to select an entry (--- = empty entry) ▶ Change ▶ Use  to enter the name for the emergency number ▶  Use  to enter the emergency number ▶ Save

Delete entry: ▶ Use  to delete the name and phone number ▶ Save

Fast access to numbers and functions

Assigning a number to digit keys (quick dial)

It is possible to assign a **number from the directory** to the keys  and  to .





A number has not been assigned to the digit key.

- ▶ Press and **hold** the digit key

or

- ▶ **Briefly** press the digit key ▶ Press the display key **QuickDial**

The directory opens.

- ▶ ... use  to select an entry ▶ OK ▶ ... use  to select a number if necessary ▶ OK ... the entry is saved to the digit key



If the entry in the directory is deleted later, this will not affect the assignment of the digit key.


Dialling a number

- ▶ Press and **hold** the digit key ... the number is dialled immediately

or


- ▶ **Briefly** press the digit key ... the number/name (possibly in abbreviated form) is shown on the left display key ▶ ... press the display key ... the number is dialled

Changing the digit key assignment

- ▶ Briefly press the digit key ▶ **Change** ... the directory is opened ... possible options:
Change the assignment:
 - ▶ ... use  to select an entry ▶ **OK** ▶ ... select a number if required ▶ **OK**
- Delete the assignment:
 - ▶ **Clear Key**

Assigning display keys / Changing assignments

The left and right display keys have a **function** preset by default when in idle mode. The key can be re-assigned.

- ▶ Press and **hold** the left or right display key in idle status ... the list of possible key assignments is opened ▶ ... Use  to select the function ▶ **OK** ... The assignment of the display key is changed

Possible functions: **Alarm Clock, Redial, Handset Directory** ... More functions are available in **More Functions...**








Starting a function

With the telephone in idle status: ▶ **Briefly press** ... the assigned function is executed

Changing the handset PIN






The handset is protected against unauthorised use by a PIN. The handset PIN must be entered e. g. when switching off the keypad lock.

Change the handset's 4-digit PIN (default setting: **0000**):

- ▶  ▶ ... use  to select  **Settings** ▶ **OK** ▶  **System** ▶ **OK** ▶  **Handset PIN** ▶ **OK** ▶ ... use  to enter the current PIN ▶ **OK** ▶ ... use  to enter the new handset PIN ▶ **OK**

Resetting a handset

Reset any individual settings and changes that you have made.

- ▶  ▶ ... use  to select  **Settings** ▶ **OK** ▶  **System** ▶ **OK** ▶  **Handset Reset** ▶ **OK** ▶ **Yes** ... the handset's settings are reset









The following settings are **not** affected by a reset

- Registration of the handset to the base station
- Date and time
- Directory entries and call lists

Resetting the handset to the default settings

Reset all settings and personal information.

- ▶  ▶ ... Use  to select  Settings ▶ OK ▶  System ▶ OK ▶  Erase Handset ▶ OK ▶ Use  to enter the current PIN ▶ OK

All user information, lists, the directory and the handset registration with the base are erased. The Registration wizard is started.

Handset update

The handset supports firmware updating via the DECT radio link to the base/router (SUOTA = Software Update Over The Air).







The phone checks whether new firmware is available for the handset. If it is, a message is displayed.

- ▶ Start the firmware update with **Yes**.

Enable/disable automatic check for new firmware:

- ▶  ▶ ... use  to select  Settings ▶ OK ▶  System ▶ OK ▶  Handset Update ▶ OK ▶  Automatic Check ▶ OK ▶ Change = enabled







Start the firmware update manually

- ▶  ▶ ... use  to select  Settings ▶ OK ▶  System ▶ OK ▶  Handset Update ▶ OK ▶  Update ▶ OK ▶ OK ... if there is new firmware, the update will start



The update process may take up to 30 minutes. During this time, only restricted handset use is available.

Checking the firmware version

- ▶  ▶ ... use  to select  Settings ▶ OK ▶  System ▶ OK ▶  Handset Update ▶ OK ▶  Current Version ▶ OK ... the firmware version of the handset is displayed

Appendix

Customer Service & Help

Do you have any questions?

For quick help and information, please refer to this user guide or visit gigasetpro.com.

For online information and services concerning

- Products
- Documents
- Interop
- Firmware
- FAQ
- Support

please refer to wiki.gigasetpro.com.

For further information our Gigaset specialised reseller will be happy to help you related to your Gigaset product.

Manufacturer's advice

Authorisation

This device is intended for use worldwide. Use outside the European Economic Area (with the exception of Switzerland) is subject to national approval.

Country-specific requirements have been taken into consideration.

Hereby, Gigaset Communications GmbH declares that the radio equipment type Gigaset R700H PRO is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

gigasetpro.com/docs.

This declaration could also be available in the "International Declarations of Conformity" or "European Declarations of Conformity" files.

Therefore please check all of these files.

Data protection

We at Gigaset take the protection of our customers' data very seriously. It is precisely for this reason that we are ensuring all our products feature "Privacy by Design" as standard. All information we collect is used to make our products as good as possible. In the process, we ensure your details are protected and only used for the purposes of making available to you a product or service. We know which path your data takes through the company and ensure this happens in line with data protection specifications in a secure and protected manner.

The full text of the privacy policy is available from: www.gigaset.com/privacy-policy

Environment

Environmental management system



Gigaset Communications GmbH is certified pursuant to the international standards ISO 14001 and ISO 9001.

ISO 14001 (Environment): Certified since September 2007 by TÜV SÜD Management Service GmbH.

ISO 9001 (Quality): Certified since 17/02/1994 by TÜV SÜD Management Service GmbH.

Disposal

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority.

All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.



This crossed-out wheeled bin symbol on the product means the product is covered by the European Directive 2012/19/EU.

The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment.

For more detailed information about disposal of your old appliance, please contact your local council refuse centre or the original supplier of the product.

Care

Wipe the device with a **damp** cloth or an antistatic cloth. Do not use solvents or microfibre cloths.

Never use a dry cloth; this can cause static.

In rare cases, contact with chemical substances can cause changes to the device's exterior. Due to the wide variety of chemical products available on the market, it was not possible to test all substances.

Impairments in high-gloss finishes can be carefully removed using display polishes for mobile phones.

Contact with liquid

If the device comes into contact with liquid:

- 1 **Disconnect the power supply.**
- 2 **Remove the batteries and leave the battery compartment open.**
- 3 Allow the liquid to drain from the device.
- 4 Pat all parts dry.
- 5 Place the device in a dry, warm place **for at least 72 hours (not in a microwave, oven etc.)** with the battery compartment open and the keypad facing down (if applicable).
- 6 **Do not switch on the device again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

Technical data

Battery

Technology:	2 x AAA NiMH
Voltage:	1.2 V
Capacity:	750 mAh

Handset operating times/charging times

The operating time of your handset depends on the capacity and age of the battery and the way they are used. (All times are maximum possible times.)

Standby time (hours)	320/180 *
Talktime (hours)	13
Operating time with 1.5 hours of calls per day (hours)	100/85 *
Charging time in charging cradle (hours)	8.5

* With the **No Radiation** function disabled / with the **No Radiation** function enabled, with no display lighting when the phone is idle and during a call

Power consumption of the handset in the charging cradle

When charging:	approx. 1.50 W
To maintain the charge status:	approx. 0.50 W

General specifications

DECT standard	Supported
GAP standard	Supported
No. of channels	60 duplex channels
Radio frequency range	1880-1900 MHz
Duplex mode	Time division multiplexing, 10 ms frame length
Repetition frequency of the transmission pulse	100 Hz
Duration of the transmission pulse	370 μ s
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW average power per channel, 250 mW pulse power
Range	Up to 50 m indoors, up to 300 m outdoors
Base station power supply	230 V ~/50 Hz
Environmental conditions for operation	+5 °C to +45 °C; 20% to 75% relative humidity
Dialling mode	DTMF (tone dialling)/PD (pulse dialling)

Bluetooth

Radio frequency range	2402-2480 MHz
Transmission power	4 mW pulse power

Power adapter for the handset

Manufacturer	Salom Electric (Xiamen) Co. Ltd. Commercial registration number: 91350200612003878C 31 Building, Huli Industrial District, Xiamen, Fujian 361006, P.R. China Salcomp (Shenzen) Co. Ltd. Commercial registration number: 91440300618932635P Salcomp Road, Furond Industrial Area, Xinqiao, Shajing, Baoan District, Shenzen 518125 China
Model identifier	C705 / C710
Input voltage	230 V
Input AC frequency	50 Hz
Output voltage	4 V
Output current	0.15 A
Output power	0.6 W
Average active efficiency	> 46%
Efficiency at low load (10%)	not relevant – only at output power > 10 W
No-load power consumption	< 0.10 W

Character charts

Standard characters

Press the relevant key the number of times indicated.

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
1	1									
2	a	b	c	2	ä	á	à	â	ã	ç
3	d	e	f	3	ë	é	è	ê		
4	g	h	i	4	ï	í	ì	î		
5	j	k	l	5						
6	m	n	o	6	ö	ñ	ó	ò	ô	õ
7	p	q	r	s	7	ß				
8	t	u	v	8	ü	ú	ù	û		
9	w	x	y	z	9	ÿ	ý	æ	ø	å
0	← ¹⁾	.	,	?	!	← ²⁾	0			

1) Space

2) Line break










Accessories









Name	Item number
Professional belt clip S:	S30852-Z2974-R142

Display icons



The following icons are displayed depending on the settings and the operating status of your telephone.



Icons in the status bar

Icon	Meaning
	Signal strength (No Radiation off) 1% -100%
	white, if Maximum Range on; green, if Maximum Range off
	Red: no connection to the base station
	No Radiation activated: white, if Maximum Range on; green, if Maximum Range off
	Profile Silent activated (Ringtone switched off)
	"Beep" ringtone activated
	Keypad lock activated
	Bluetooth enabled
	Headset / hearing aid connected via Bluetooth






Icon	Meaning
	Data device connected via Bluetooth
	"Do not disturb" enabled
	Battery charge status:
	White: between 11% and 100% charged
	Red: less than 11% charged
	Flashes red: battery almost empty (approx. 5 minutes of talktime left)
	Battery is charging (current charge status):
	0% - 100%





Display key icons

Icon	Meaning
	Last number redial
	Delete text








Icon	Meaning
	Open the directory
	Copy number to the directory

Display icons to indicate ...

Icon	Meaning
	External call
	Internal call
	Establishing a call (outgoing call)
	Connection established
	No connection established/ connection terminated

Icon	Meaning
	Reminder for appointment
	Reminder for anniversary
	Alarm call
	Countdown timer

Other display icons

Icon	Meaning
	Alarm clock is activated, display with alarm time
	Timer switched on, display with countdown
	Action complete (green)
	Action failed (red)
	Information
	(Security) prompt
	Please wait ...

Menu overview



Not all functions described in the user guide are available in all countries or from all network providers.

Open the main menu: ► when handset is in idle status press



Select Services

Next Call Anonym.	→ p. 23
Call Divert	→ p. 23
Call Waiting	→ p. 24
Do Not Disturb	→ p. 24
Ringback Off	→ p. 24



Info Centre

Company-specific functions can be provided by Gigaset N870 IP PRO.



Additional Features

LED Torch	→ p. 15
1 Touch	→ p. 18
Resource Directory	→ p. 41
Screensavers	→ p. 41
Caller Pictures	→ p. 41
Sounds	→ p. 41
Capacity	→ p. 42



Call Lists

All calls	→ p. 25
Outgoing calls	→ p. 25
Accepted calls	→ p. 25
Missed calls	→ p. 25



Answer Machine

Play Messages	→ p. 33
Network Mailbox	→ p. 33



Organizer

Calendar	→ p. 35
Timer	→ p. 37
Alarm Clock	→ p. 38
Missed Appts	→ p. 36



Contacts

Directory	→ p. 27
Online Directory	→ p. 27



Settings

Date/Time	Is set centrally. Manual settings on the handset are ignored.		
Audio Settings	Handset Volume		→ p. 48
	Smart Volume	Earpiece Volume	→ p. 49
		Ringtone Volume	→ p. 49
	Mic Sensitivity	→ p. 49
	Acoustic Profiles	Earpiece Profiles	→ p. 50
		Handsfree Profiles	→ p. 50
	Advisory Tones	→ p. 51
	Do Not Disturb	→ p. 40
	Silent Alert	→ p. 51
	Ringtones (Handset)	Volume	→ p. 50
		Melodies	→ p. 50
		Time Control	→ p. 39
		Anon. Calls Silent	→ p. 39
		Silent Charging	→ p. 39
	→ p. 49	
Display & Keypad	Screensaver	→ p. 46
	Large Font	→ p. 47
	Colour Schemes	→ p. 47
	Display Backlight	→ p. 47
	Key Illumination	→ p. 48
	Auto Keypadlock	→ p. 48
Language	→ p. 46	
Registration	Register Handset	→ p. 10
	Select Base	→ p. 10
	Basic Registration	→ p. 10
Bluetooth	Activation	→ p. 42
	Search Devices	→ p. 43
	Known Devices	→ p. 43
	Own Device	→ p. 44
Telephony	Auto Answer	→ p. 48
	Auto-Accept Call	→ p. 48
	LED Call Signal	→ p. 52
	Area Codes	Is set centrally. Manual settings on the handset are ignored.	
	Country	→ p. 46
	Emergency Numbers	→ p. 52
System	Handset Reset	→ p. 53
	Handset PIN	→ p. 53
	Handset Update	→ p. 54
	Erase Handset	→ p. 54

Open Source Software

General

Your Gigaset device includes Open Source software that is subject to various license conditions. With regard to Open Source software, the granting of usage rights that go beyond the operation of the device in the form supplied by Gigaset Communications GmbH is governed by the relevant license conditions of the Open Source software. The corresponding licence conditions can be found below in their original version.

The respective license texts regularly contain limitations of liability with regard to the relevant licensor of Open Source Software. The exclusion of liability for the LGPL Version 2.1, for example, reads as follows:

„This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.“

The liability of Gigaset Communications GmbH remains unaffected by this.

Licence and copyright information

Your Gigaset unit includes Open Source software. The corresponding licence conditions can be found below in their original version.

Licence texts

Copyright (c) 2001, Dr Brian Gladman <>, Worcester, UK.
All rights reserved.

LICENSE TERMS

The free distribution and use of this software in both source and binary form is allowed (with or without changes) provided that:

1. distributions of this source code include the above copyright notice, this list of conditions and the following disclaimer;
2. distributions in binary form include the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other associated materials;
3. the copyright holder's name is not used to endorse products built using this software without specific written permission.

DISCLAIMER

This software is provided 'as is' with no explicit or implied warranties in respect of its properties, including, but not limited to, correctness and fitness for purpose.

Issue Date: 29/07/2002

Index

-
- A**
- Advisory tones 51
 - Alarm 38
 - Alarm clock 38
 - switch on/off 38
 - Alert tone (beep) 35, 51
 - Anniversary, see Appointment
 - Answer machine
 - calling back a caller 25
 - missed 51
 - Answer, auto 33
 - Answering machine, play messages 33
 - Appointment
 - display missed 36
 - missed 36
 - notification 36
 - setting 35
 - Area code 17
 - Assigning number key 52
 - Auto answer 51
 - simple 20
 - Automatic
 - redial 18
-
- B**
- Battery
 - charging status 60
 - inserting 9
 - Beep (alert tone) 35, 51
 - Belt clip 11
 - Bluetooth 42
 - activate 42
 - changing the device name 44
 - copy directory (vCard) 30
 - de-register devices 43
 - list of known devices 43
 - registering devices 43
 - Broken display 6
-
- C**
- Calendar 35
 - Call
 - anonymous 23
 - external 17
 - incoming 20
 - Call divert 23
 - Call list
 - copying a number to the directory 25
 - delete 25
 - delete an entry 25
 - dialling 18
 - entry 25
 - opening 25
 - Call lists 25
 - Call Manager 20
 - Call protection 39
 - Call swapping, two external calls 21
 - Call transfer 22
 - Call waiting 24
 - Call waiting, external
 - accepting/rejecting 20
 - Call, anonymous 23
 - protection from 39
 - Calling Line Identification
 - switching off temporarily 23
 - Calls
 - making an external call 17
 - Care 56
 - Care of the device 56
 - Changing
 - display language 46
 - Changing the device name (Bluetooth) 44
 - Changing the handset PIN 53
 - Character charts 58
 - Charge status of the batteries 60
 - Charging the batteries 9
 - Charging time of handset 57
 - CLIP image
 - view in resource directory 41
 - CLIP, CLI Presentation 23
 - CLIP-picture, in directory 28
 - Colour scheme 47
 - Company directory 27, 30
 - automatic search 30
 - dial number 32
 - open 31
 - search 31
 - search for entry 31
 - search mode 31
 - Conference call 21
 - ending 21
 - two external calls 21
 - Connecting the charging cradle (handset) 8
 - Connecting the USB data cable 12
 - Consultation call 21
 - end 21
 - Contact with liquid 56
 - Contents of the package 8
 - Control key 3, 13
 - Correcting incorrect entries 16
 - Countdown (timer) 37
 - Country 46
 - Customer Care 55
 - Customer Service 55
-
- D**
- Data protection 55
 - Delayed Extension Dialling 19
 - De-registering devices (Bluetooth) 43

-
- Dialling
 - from the call list 18
 - from the redial list 17
 - using quick dial 52
 - Dialling pause 19
 - Directories
 - using them 27
 - Directory 28
 - copy vCard (Bluetooth) 30
 - copying numbers 29
 - entry 28
 - memory 29
 - open 27
 - order of entries 29
 - saving an entry 28
 - searching 29
 - selecting an entry 29
 - Directory key
 - assignment 27
 - Display
 - backlight 47
 - broken 6
 - changing display language 46
 - colour scheme 47
 - directory memory 29
 - large font 47
 - missed appointment/anniversary 36
 - network mailbox message 26
 - screensaver 46
 - setting 46
 - Display icons 60
 - Display keys 3, 14
 - assigning 52
 - icons 60
 - Display language
 - setting 10
 - Disposal 56
 - "Do not disturb" profile 34
 - Do not disturb 24
-
- E**
 - Earpiece profile 50
 - Earpiece volume 22
 - automatic 49
 - Emergency numbers 52
 - not possible 6
 - End call key 3, 17
 - Entering special characters 16
 - Entering text 16
 - Entering umlauts 16
 - Environment 56
 - Extension systems, dialling (Delayed Extension Dialling) 19
 - F**
 - Firmware update 54
 - Firmware updates 45
 - Functions key 3
-
- G**
 - Getting started 8
 - Gigaset QuickSync 30, 44
 - Group accept 20
-
- H**
 - Handset
 - automatic keypad lock 48
 - changing the settings 46
 - colour scheme 47
 - connecting the charging cradle 8
 - display backlight 47
 - display language 46
 - handset volume 22
 - handsfree volume 22
 - idle status 16
 - keypad illumination 48
 - muting 22
 - overview 3
 - registering 10
 - resetting 53
 - restoring to default setting 54
 - setting up 9
 - switch on/off 13
 - update 54
 - Handsfree key 22
 - Handsfree mode 22
 - Handsfree profile 50
 - Handsfree volume 22
 - Hash key 3
 - Headset (Bluetooth) 42
 - Headset connection 3
 - Headset socket 12
 - Headset volume 49
 - Help 55
-
- I**
 - Icons
 - alarm clock 38
 - displaying new messages 26
 - indications 61
 - on display keys 60
 - status bar 60
 - timer 37
 - Idle status
 - returning to 16
 - Illumination, keypad 48
 - Indications, icons 61
 - INT key, open directory 27
-
- K**
 - Key 1 (fast access) 3
 - Key, assigning 52
 - Keypad illumination 48
 - Keypad lock, automatic 48

-
- Keys
 - control key 3, 13
 - display keys 3, 14
 - end call key 3, 17
 - fast access 3
 - functions key 3
 - handsfree 22
 - hash key 3
 - menu 13
 - message key 3
 - on/off key 3
 - profile key 3, 34
 - recall key 3
 - star key 3
 - talk key 3
 - volume 14
 - volume keys 3
-
- L**
 - Language
 - display 46
 - Large font 47
 - LDAP (Lightweight Directory Access Protocol) .. 30
 - LED 3
 - Liquid 56
 - List
 - known devices (Bluetooth) 43
 - Locking/unlocking the keypad 13
 - Loud surroundings 23
 - Lower/upper case 16
-
- M**
 - Mains unit
 - handset 58
 - Making calls
 - external 17
 - Manufacturer's advice 55
 - Medical equipment 7
 - Melody
 - ringtone for internal/external calls 50
 - Memory in the directory 29
 - Memory, resource directory 42
 - Menu key 13
 - Message key 3
 - Message lists 26
 - Message Waiting Indicator (MWI) 26
 - Messages
 - play on network mailbox 33
 - Microphone 3
 - adjust sensitivity 23, 49
 - switch on/off 22
 - volume 49
 - Missed anniversaries/appointments 36
 - Missed calls
 - counter 25, 26
 - Multi-cell system 4
 - Muting the handset 22
-
- N**
 - Network mailbox 33
 - enter number 33
 - play messages 33
 - Network MB, see Network mailbox
 - Network provider 23
 - Network services 23
 - Number
 - copying to the directory 29
 - do not transfer 23
 - saving in the directory 28
 - withhold 23
 - Numbers
 - entering 16
-
- O**
 - On/off key 3
 - One touch call 18
 - Open Source Software 64
 - Operating time of handset 57
 - Overview
 - handset 3
-
- P**
 - PC Interface 44
 - Picture
 - as CLIP image 41
 - as screensaver 41
 - delete 41
 - formats 41
 - rename 41
 - Play sound 41
 - Power adapter 6, 58
 - handset 58
 - Profile key 3, 34
 - Profiles 34
 - Protection from calls
 - "Do not disturb" profile 34
 - anonymous 39
 - switch off ringtone when in charging
 - cradle 39
 - time control 39
-
- Q**
 - QuickSync 30, 44
-
- R**
 - Recall key 3
 - Redial list 17, 25
 - Registering (handset) 10
 - Registering device (Bluetooth) 43
 - Resource Directory 41
 - memory 42
 - Resource directory
 - view CLIP image 41

- Ringback
 cancelling 24
 disable on busy 19
 when busy 19
 Ringback when call is not answered 19
 Ringtone 50
 automatic volume 49
 changing 50
 disable 20
 melody for internal/external calls 50
 switch off when in charging cradle 39
 time control 39
 volume 50
-
- S**
 Screensaver 46
 Searching in directory 29
 Sensitivity
 volume 49
 Setting up the handset 9
 Show new messages 26
 Show notifications 26
 Sicherheitshinweise 6
 Signal strength 60
 Silent alert 51
 Simple Auto Answer 20
 Snooze mode (alarm) 38
 Sound
 delete 41
 formats 41
 playback 41
 rename 41
 Sound profiles 34
 Sounds for ringtones 41
 Speaker 22
-
- Spot LED 3
 turn on/off 15
 Star key 3
 Status bar 3
 icons 60
 SUOTA 54
 Switch on/off alarm (timer) 38
 Symbols, see Icons 60
-
- T**
 Talk key 3
 Technical data 57
 Telephone
 operating 13
 Time control for external calls 39
 Timer 37
 Torch 3
 switching on and off 15
-
- U**
 Update 45
 Upper/lower case 16
-
- V**
 Viewing network mailbox message 26
 VIP group, classify directory entry 28
 VIP ringtone 28
 Visual call signal 52
 Volume
 earpiece 48
 handset speaker/earpiece volume 22
 headset 48, 49
 speaker 48
 Volume keys 3, 14

Issued by

Gigaset Communications GmbH
Frankenstr. 2a, D-46395 Bocholt

© Gigaset Communications GmbH 2021

Subject to availability.

All rights reserved. Rights of modification reserved.

www.gigasetpro.com