

## **Maxwell 10 DECT handset installation**

## UnPacking the Handset

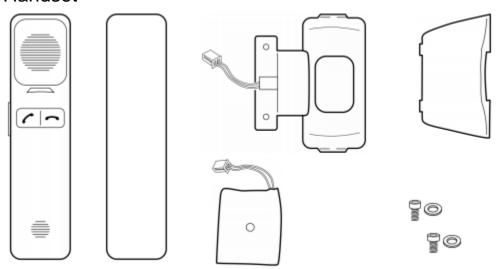


## Assembling the DECT Handset

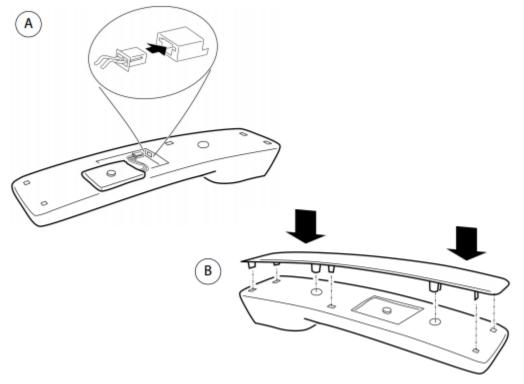



## Mounting the Cradle

The handset can be installed at the left side or the right side of the device. A

The cradle is attached to the device with the 2 delivered screws and the following tool is needed.

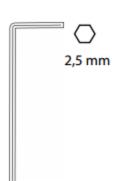

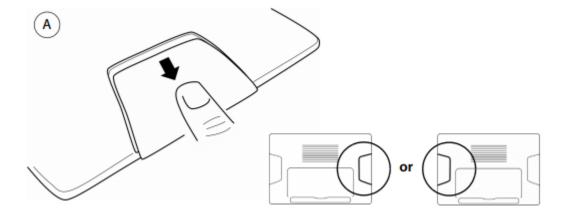

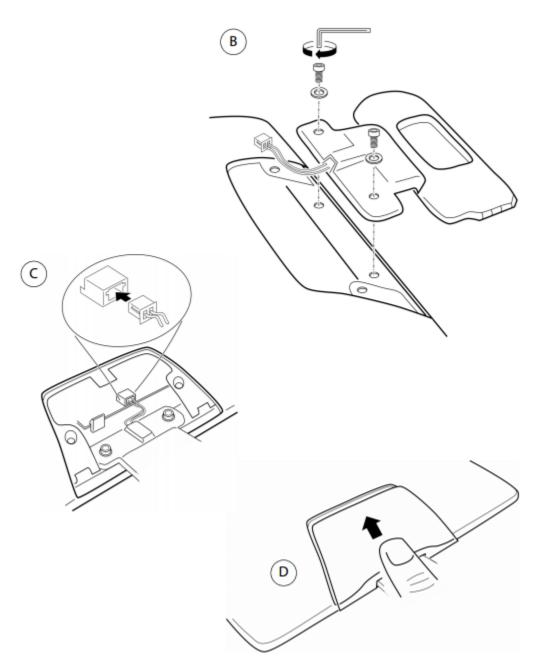

- UnPacking the Handset Assembling the DECT Handset Mounting the Cradle