

FAQ T640 T440 Simple pcap tracing

Introduction

Here we explain how to make a pcap trace in case this is requested.


Step-by-step guide

1. Connect to the T640/T440 using SSH
2. Log in using username **root**, and your admin **PIN**
3. Type **tcpdump -i eth2 -s 0 -w /home/trace.pcap** and press Enter (Pcap will be saved in /home folder as trace.pcap)
4. Press **CTRL+C** to stop tracing
5. With Windows you can use [WinSPC](#) to connect to the T640/T440 and get the trace



Important: use the SCP protocol to connect to the T640/T440

6. Copy the trace.pcap file from the T640/T440 /home folder to your PC
7. Now you can open this file with [Wireshark](#) and/or send it to us

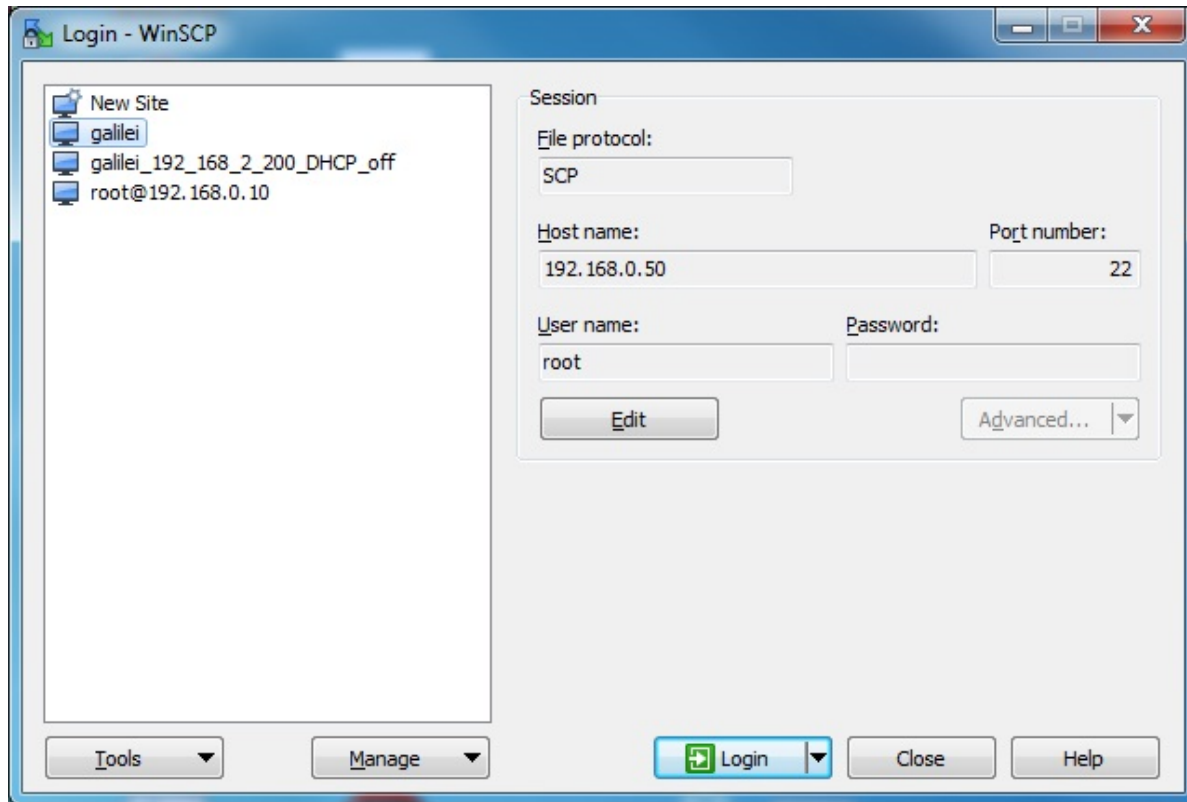

- [Introduction](#)
- [Step-by-step guide](#)