

# Maxwell 10 Build 2.2.129

## Release Notes

### Release Date:

Oct 2016

### Version:

2.2.129

## Improvements

### Android 5.1.1 (Lollipop)

- Bluetooth headset support
- Improved headset architecture
- Video performance improvements
- Many other improvements

## Information

Due to technical design, wireless LAN and Bluetooth Audio should not be used simultaneously

Download

Software versions	
Android	5.1.1
DVF9919	03.641a
Build number	80_1_2.2.129

## Firmware update



### Important

Due to the fact, that Android-5.1 requires a lot of more memory than older Android versions we recommend to insert an [external SD-card](#), or plug in an USB-stick with minimum 2GB free memory space, at least during the upgrade phase!

We strongly advise to do a [factory reset](#) after the upgrade to Lollipop, to be sure that all new Lollipop features and settings are correct. A stable SIP device is required in a business customer environment. Via [save - restore](#) the configuration or provisioning, the SIP accounts settings can easily be restored. For Android settings / Apps, see the [Android Backup and Restore procedure](#).

There are 3 options to upgrade.

## Option 1: Two step Method using an SD-card or USB-memory-stick.

1. Plug in an SD-card or USB-stick with at least 2GB free memory (or enter an external SD card). Then start the Maxwell-10 WEB-UI and follow exactly the following 3 steps:
2. In the web-interface go to: *System - Firmware Update* page and check if the *Data server* field is (default) [profile.gigaset.net/device](http://profile.gigaset.net/device)

Data server	<input type="text" value="profile.gigaset.net/device"/>	Update firmware
<input type="text" value="..set custom url here"/>		


3. Press "Save"
4. Press "Update firmware"

The update will be done in 2 steps.

1. Upgrade to new Jelly Bean software with USB drivers upgrade to support the USB memory extension.
2. Upgrade to Lollipop.

## Option 2: One step method using external SD-card.

1. Enter an [external SD-card](#) (or plug in an USB-stick).
2. Download the software via the "Download" button on this page.
3. Unpack the zip file. You will get a .txt file with the Open Source License text and an encrypted zip file which is your firmware image.
4. In the web-interface go to: *System - Firmware Update* page and select the above extracted zip file.

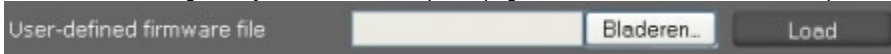


User-defined firmware file

5. Start the upgrade.

## Option 3: One step method without external SD-card.

1. Do a [factory reset](#) of the Maxwell 10 to free all memory for firmware update.
2. Download the software via the "Download" button on this page.
3. Unpack the zip file. You will get a .txt file with the Open Source License text and an encrypted zip file which is your firmware image.
4. In the web-interface go to: *System - Firmware Update* page and select the above extracted zip file.

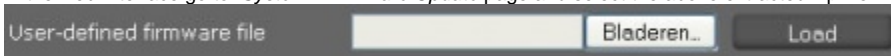

User-defined firmware file

5. Start the upgrade.