

Gigaset pro



Maxwell basic

BECAUSE IT'S YOUR BUSINESS.

Contents

Overview	2
Keys	2
Connections	4
Illustration in the user guide	5
Safety precautions	6
Using the telephone	7
Getting to know your telephone	7
Making calls	11
Call lists	19
Message Centre	21
Voice mails	22
Directories	23
Door interphone	27
Settings	28
Basic settings	28
Configuring other settings with the Web configurator	33
Status of the telephone	40
Appendix	41
Service (Customer Care)	41
Manufacturer's advice	41
Menu tree	44
Display icons	45
Index	46



If the telephone is connected to a telephone system, the telephone system can have a bearing on the telephone functions or block or add to them.

Further information: → User guide for the telephone system

This guide is aimed at telephone users.





Information for administrators: → wiki.gigasetpro.com

Overview

Keys



1	Display keys	Activate the display key functions	→ p. 7
2	Volume keys	Depending on the operating mode: Adjust the volume of the speaker, receiver, headset or ringtone	→ p. 15
3	Star key	Display special characters when inputting text Activate/deactivate the ringtone	→ p. 10 → p. 13
4	Hash key	Switch text mode (upper/lower case letters, digits) Lock/unlock the keypad	→ p. 10 → p. 10

5	Status LED 	Status display for incoming calls Flashes: Incoming call Lights up: Call in progress	
6	Control key	Scroll through lists and entries. In idle status:  Open the call list  Open the menu  Open the directory	→ p. 8 → p. 19 → p. 9 → p. 23
7	Do Not Disturb key	Activate/deactivate Do Not Disturb (DND) Lights up: "Do Not Disturb" function is activated	→ p. 13
8	Message Centre	Open call and message lists Flashes: New message in the Message Centre	→ p. 19
9	Consultation call key	Initiate/end consultation call; put participant on hold	→ p. 17
10	End/back key	End/reject call; cancel function; go back one menu level (press briefly); return to idle status (press and hold)	→ p. 15 → p. 9
11	Conference call key	Initiate conference call	→ p. 17
12	Handsfree key	Activate/deactivate speakers Start dialling Lights up: Call is being made via the speaker (handsfree mode)	→ p. 15 → p. 11
13	Headset key	Make call via headset Start dialling Lights up: Call is being made via the headset	→ p. 13 → p. 11
14	Mute key	Activate/deactivate microphone (mute) Lights up: The microphone is muted	→ p. 15
15	Microphone	Microphone of the handsfree unit	

Connections

















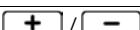





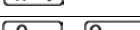

- 1  Expansion module with function keys
- 2  LAN (PoE)
- 3  PC; a PC can also be connected to the telephone instead of to the local network, the telephone establishes the network connection
- 4  Receiver
- 5  Headset with RJ11 plug
- 7  12 V \equiv Power adapter
--⊖+

Illustration in the user guide

Icons

	Important information regarding function and appropriate handling or functions that could generate costs.
	Prerequisite for carrying out the following action.
	Additional helpful information.




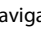





Keys

	Handsfree key		Do not disturb key
	Headset key		Message key
	End/Back key		Volume keys
	Conference call key		Hash key
	Consultation call key		Star key
	Mute key		Digit/letter keys
	Control key rim / centre		
OK, Back, Select, Save, ...		Display keys	

Procedures

Example: Setting the display language

▶  ▶ ... use  to select  **Settings** ▶ OK ▶ **Language** ▶ OK ▶ ... use  to select the language ▶ **Select** ( = selected)

Step	Follow this procedure
▶ 	Press the centre of the Control key in idle status. The main menu opens.
▶   ▶ OK	Navigate to the  icon using the Control key  . Press OK to confirm. The submenu Settings opens.
▶ Language ▶ OK	Select the Language entry using the Control key  . Press OK to confirm. The submenu Language opens.
▶ 	Press the Control key  to select the language required.
▶ Select	Press the Display key Select to highlight the entry. The selected option is indicated with  .

Safety precautions

Read the safety precautions and the user guide before use.



Comprehensive user guides for all telephones and telephone systems as well as for accessories can be found online at www.gigasetpro.com in the Support category. We thereby help to save paper while providing fast access to the complete up-to-date documentation at any time.



Use only the power adapter indicated on the device.

Use only the cable supplied for LAN connection and connect it to the intended ports only.



Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g., doctor's surgery. If you use a medical device (e.g., a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy (for the specifications of your Gigaset product see "Specifications").



The devices are not splashproof. For this reason do not install them in a damp environment such as bathrooms or shower rooms.



Do not use the devices in environments with a potential explosion hazard (e.g., paint shops).



Remove faulty devices from use or have them repaired by our Service team, as these could interfere with other wireless services. Disconnect the telephone network connector (TNV circuit connector).



The device cannot be used in the event of a power failure. It is also not possible to transmit emergency calls



To connect the phone to the local network and PC only use shielded cables.



Using the telephone

Getting to know your telephone

Display

Display in idle status (example):



- 1 Name of the standard connection, possibly abbreviated (is allocated by the administrator e. g. extension and/or name of the telephone user) → p. 11
- 2 Message display:
 -  New messages on the answer machine → p. 22
 -  Missed calls → p. 19
- 3 Display key functions → p. 7
- 4 Status icons → p. 45
- 5 Date and time → p. 28




Setting/modifying display colours: → p. 31

Setting date and time: → p. 28

Activating/deactivating screensaver: → p. 38

Display keys



The display keys perform a range of functions depending on the operating situation.



Control key



The Control key enables you to navigate the menus and input fields, and also to call up certain functions depending on the situation.

In the description below, the side of the Control key (up, down, right, left) that you have to press in the different operating situations is marked in black, e. g.  for "press right on the Control key" or  for "press the centre of the Control key".

In idle status


Open the main menu


Open the call lists

Open the directory assigned to the key

Open the list of available directories



Briefly press 

Press and hold 


In submenus and lists and selection fields


Select/confirm function

Scroll one line upwards/downwards

Scroll the list upwards/downwards



Briefly press 


Press and hold 


In input fields


Moves the cursor up/down line by line

Moves the cursor to the left/right **one character at a time**

Moves the cursor rapidly to the left/right

Briefly press 


Briefly press 


Press and hold 

During a conversation

Open the directory

Open the list of available online directories

Briefly press 


Press and hold 

Menu navigation

The functions of the telephone are displayed in a menu that consists of several levels.

Menu overview → p. 44

Main menu

In idle status: ▶ Press the **centre** of the Control key .

The function selected from the display menu is displayed with an icon.

Arrows indicate whether there are more menu entries:


▲ above, ▼ below, ◀ above and below

▶ ... Use the Control key  to select a submenu

▶ Press the Display key **OK**


or

▶ Press the Control key 

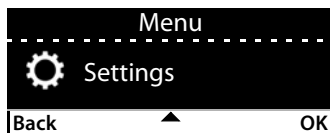

Submenus


The functions in the submenus are displayed as lists. The selected function is highlighted.

▶ ... Use the Control key  to select a function


▶ Press the Display key **OK**

or

▶ Press the Control key 

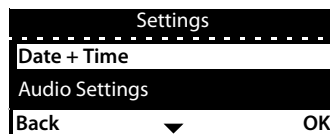


If not all the functions can be displayed, arrows are shown below.

Displaying more list entries: ▶ ... scroll in the direction of the arrow with the Control key 


Returning to the previous menu level

▶ Press the Display key **Back**

or

▶ press the End key  briefly

Returning to idle status

▶ Press and **hold** the End key 





If a key is not pressed, after 3 minutes the display will **automatically** change to idle status.


Settings which have not been saved or confirmed are rejected.

Entering text




Input position

- ▶ Use  to select an entry field. A field is activated when the cursor is blinking inside it.
- ▶ Use  to move the position of the cursor.

Correcting incorrect entries

Delete **characters** to the left of the cursor: ▶ 

Entering letters/characters

Multiple letters and digits are assigned to each key between  and  and the  key. As soon as a key is pressed, the possible characters are displayed at the bottom of the display.


The selected character is highlighted.





Select letters/digits:

- ▶ Press the key **briefly** several times in succession

Switch between lower case, upper case and digit entry mode:

- ▶ Press the Hash key  ... the mode set is displayed at the bottom on the right
When editing a directory entry, the first letter and each letter following a space is automatically in upper case.



Entering special characters:

- ▶ Press the Star key  ... the available special characters are displayed ▶ ... use  to navigate to the character you want ▶ **OK**

Locking/unlocking the keypad

The keypad lock prevents any accidental use of the telephone.

Locking the keypad: ▶ Press and hold  ... the following icon appears on the display 

Unlocking the keypad: ▶ Press and hold  ▶ ... use  to enter the keypad lock PIN (default setting: 1234) ▶ **OK**



Changing the keypad lock PIN with the Web configurator: → p. 33

If a call is indicated on the handset, the keypad automatically unlocks and you can accept the call. It then locks again when the call is finished.

It is not possible to call emergency numbers either when keypad lock is activated.

Making calls



The phone is connected to the LAN.

At least one VoIP connection has been set up and assigned to the telephone.





VoIP connections are set up by the administrator with the Web configurator or assigned using a PABX.

Up to four VoIP connections (call numbers) can be assigned to the telephone. The first connection to be set up is the standard send connection. The name of the standard send connection is displayed in idle status at the top left of the display header (→ p. 7).



No connection available: the following icon is shown in the display 

Information about the telephone connections and the standard send connection: Web configurator → p. 40



Making a call

▶ ... use  to enter a number ▶  lift the handset

or

▶  lift the handset ▶ ... use  to enter a number ▶ **Dial**

Calls are initiated via the standard send connection if you do not select another option. To use another VoIP connection:

▶ **Select Line** ▶ ... use  to select required connection ▶ **Dial** ▶ ... use  to enter the number ▶ **Dial**

Using the speaker to make calls: ▶  Press the Handsfree key

Using the headset to make calls: ▶  Press the Headset key




You can switch over at any time during the conversation.

In the following instructions, the icon  also always stands for  or .

When entering the call number:

Deleting incorrectly entered numbers to the left of the cursor: ▶ 

Transferring a number to the local directory: ▶  (→ p. 23)

Cancel dialling: ▶ **End**

Incoming call during number entry:

Accept the call: ▶ **Accept**


Reject the call: ▶ **Reject**

Dialling from the directory

▶ ... use  to open the directory ▶  select entry ▶  lift the handset

or

▶  ▶ ... use  to select **Contacts** ▶ **OK** ▶  select entry ▶  lift the handset

More than one number in the directory entry: ▶ ... use  to select a number ▶ **OK**

Dialling from the redial list

The redial list contains the most recently dialled numbers.

▶ In idle status press **Redial** ▶  select entry ▶  lift the handset

or

▶ ... use  to open the call lists ▶  **Outgoing** ▶  select entry ▶  lift the handset

Dialling from a call list

The call lists contain the most recent accepted, outgoing and missed calls (→ p. 19). If the number is saved in the directory, the name is displayed.

▶ ... use  to open the call lists ▶  select a list (**All, Accepted, Missed, Outgoing**) ▶  select entry ▶  lift the handset

or

▶  ▶ ... use  to select **Call Lists** ▶  select a list ▶ **OK** ▶  select an entry ▶  lift the handset



The list of new missed calls can also be opened by pressing the Message key .

Ringback

Asking for a ring back when the line of a participant you have called is busy.



The PABX or the provider supports this function.

Initiating ringback

▶ **Ringback** ... the ringback request is registered

When the other participant's line is free, the ringback is initiated. The telephone rings, **Ringback** is displayed in the header.


There can be an active ringback on each line.

Cancelling ringback







▶  ▶ ... use  to select  **Select Services** ▶ **OK** ▶  **Cancel Ringback** ▶ **OK**

Anonymous calling

Withhold Calling Line Identification. The number is not shown to the person receiving the call.



The PABX or the provider supports this function.

▶  ▶ ... use  to select  **Select Services** ▶ OK ▶  **Withhold Number** ▶ OK ▶ if necessary, use  to select a line ▶ **Change**  = calls are anonymous)

Incoming calls

An incoming call is indicated by ringing, by a display on the screen and by the flashing Status LED.

The display shows

- the line on which the call is coming in on
- the caller's name if it has been stored in the directory
- the caller's number if it has been transmitted (→ p. 13)

()	1 P1
Peter Smith 004989123456789	
Reject	Silence

Accepting the call: ▶  lift the handset

Switching the ringtone off:

▶ **Silence**

Rejecting the call: ▶ **Reject**




When a call comes in, the system looks for a matching entry in the local directory. If the number is not found there, other directories are searched, if any have been configured.

Protection from incoming calls

Activating/deactivating the ringtone

An incoming call is not signalled by ringing, but is displayed on the screen.

Switching the ringtone on/off: ▶ Press and **hold** the Star key 



Ringtone is switched off: the following icon appears on the display 



Ringtone silencing for anonymous calls: → p. 29.

Switching the alert tone (beep) on/off

Switch on an alert tone (beep) instead of the ringtone:


- ▶ Press and **hold** the Star key  ▶ press **Beep** within 3 seconds ... the following icon appears in the status line 

Switching off the alert tone: ▶ Press and **hold** the Star key 

Switching the "Do not disturb" function on and off

Incoming calls are not signalled.

Switching "Do not disturb" on or off: ▶ Press the Do not disturb key 

"Do not disturb" is switched on: the Do not disturb key  is illuminated, the display shows **"Do not disturb" active**




Set up call forwarding: → p. 18

The administrator can create a list of numbers which should never be signalled by the telephone in the Web configurator.

During a conversation

Changing the volume

Changing the volume of the handset, the handsfree function or the headset during a call.

Louder:  ▶ Save

The volume can be set at 10 levels.

Quieter:  ▶ Save

The current setting is displayed.




If there is no input for two seconds, the most recent value is stored automatically.



Permanent volume settings: → p. 29.

Muting

Switching off the microphone in the handset, the handsfree facility and the headset. The other party to the call no longer hears what is being said.

Activating/deactivating the microphone: ▶ Press the Mute key 


Microphone is switched off: the Mute key  is illuminated

Switching the handsfree function on/off


Making calls via the speaker and the microphone of the handsfree function.

Switching on the handsfree function during a call:

▶ Press the Handsfree key  ▶ Replace handset 

Handsfree function is switched on: the  key is illuminated

Switching off the handsfree function during a call:

▶ Lift the handset  ▶ continue the call through the handset

Displaying information

▶ Info . . . Information about the device is displayed (→ p. 32)

Ending a call

▶ Replace the handset 

Talking with several participants on the telephone

Accepting/rejecting Call Waiting



The PABX or the provider supports this function and the function is activated on the telephone (→ p. 35).

Another call comes in during a conversation. The call is signalled in the display and by the Call Waiting tone. **Call Waiting** is displayed in the header.

Accepting the call:

- ▶ **Accept** ... the connection to the waiting participant is made. The first participant is put on hold and hears some on-hold music.

Rejecting the call:

- ▶ **Reject**

Permit/prevent Call Waiting

Permit or prevent Call Waiting during a call for all or for certain lines.

- ▶ ▶ ... use to select **Select Services** ▶ **OK** ▶ **Call Waiting** ▶ **OK** ▶ if necessary, press to select line ▶ **Change** = Call Waiting is permitted)



Define settings for Call Waiting with the Web configurator → p. 35

Consultation calls

Consulting a second participant during a conversation.

- ▶ Press the Consultation call key

or

- ▶ **Consult**

... the first conversation is put on hold

- ▶ Initiate a consultation call via the keypad or from the directory

... when the participant picks up, conduct consultation call

The display shows:

On hold: <Number> or <name in the directory>

	Call Swap
004989123456789	
On hold: Peter Smith	
End	Swap

Ending a consultation call:

- ▶ **End** ... the connection to the participant on hold is reactivated

or




- ▶ Replace the handset

The call on hold is transferred to the consultation participant.



If the consultation participant does not accept the call: a recall is initiated by the participant on hold (your telephone rings). If you accept the call, you will be reconnected to the participant previously on hold.

Initiating consultation call from the directory

During the conversation:

- ▶ Press the Control key  ▶  select entry ▶ **Options** ▶ **Dial** ▶ **OK** ▶ ... if necessary, select the number with  ▶ **OK** ... the first conversation is put on hold, the number is dialled

or

- ▶ **Consult** ... the first conversation is put on hold ▶ **Directory** ▶  select entry ▶ **Dial** ▶ ... if necessary, use  to select the number ▶ **OK** ... the number is selected

Call swapping

Switch back and forth between two participants. The other call is placed on hold.


- ▶ Call a second participant during an external conversation (consultation call) or accept a waiting call ▶ ... use **Swap** to switch between the participants

Ending the connection to the active participant:

- ▶ **End** ... the connection to the participant on hold is reactivated




Other ways of ending the call-swapping session:

- Replace the handset : The other two participants will be connected to one another.
- The **active** participant ends the conversation: The connection to the participant on hold is reactivated
- The participant **on hold** ends the conversation: The connection to the active participant remains active.

Conference call


Speaking to two participants at the same time.

Initiating a conference call during a conversation:


- ▶ Press the Conference call key  ▶ call second participant ... the conference is established as soon as the call is accepted

Conference
Peter Smith
004989123456789
End

Initiating a conference from call swapping:


- ▶ Press the Conference call key  ... the active participant and the participant on hold will be switched into the conference

Ending a conference call:

- ▶ **End** or ▶ replace the handset  ... the conference ends for all the participants

Transferring a call

Connecting both external participants to one another during call swapping or in an external consultation call:

- ▶ Replace the handset  ... the call on hold will be transferred to the active participant. If the active participant does not accept the call, a recall will be initiated by the participant on hold.

Call divert

All incoming calls are diverted to another line or a network mailbox. A call divert function can be configured for every line on the telephone.



The PABX or the provider supports this function.

If calls are diverted to an answer machine, it must be set up by the administrator with the Web configurator.

Activating call divert:

▶ ▶ ... use to select **Select Services** ▶ OK ▶ **Call Divert** ▶ OK ▶ ...
if necessary, use to select a connection ▶ **Change**

▶ ... use to select **Phone Number** ▶ enter number ▶ **Save**

or

▶ ... use to select **Voice Mail** ▶ **Save** ... calls are forwarded to the answer machine assigned to the connection.

In idle status, the active call divert and the destination for the diverted call are shown on the display.

Deactivating call divert:


▶ ▶ ... use to select **Select Services** ▶ OK ▶ **Call Divert** ▶ OK ...
connections with active call divert are marked with ▶ ... use to select a connection ▶ **Change**



Specifying different call diverts for engaged numbers or calls which are not picked up with the Web configurator → p. 36

Call lists

The telephone saves different types of calls in lists. The following call lists are available:

All Calls	All outgoing, accepted and missed calls.
Accepted Calls	Calls that were accepted.
Missed Calls	Calls that were not accepted. Missed calls that have not yet been viewed can also be accessed via the Message key  (→ p. 19).
Outgoing Calls	Last selected numbers (redial list).

If the call list is full, a new entry overwrites the oldest.

Opening the call list

▶  ▶ ... the list **All Calls** is displayed

or

▶  ▶ ... use  to select **Call Lists** ▶ **OK** ▶ use  to select list type ▶ **OK**

Information about the calls

- Icon for the call type:



Missed Calls,






Accepted Calls,

-  **Outgoing Calls**

All Calls	
 Peter Brown	Today
08901234567890	10:30
View	Options

- Caller's number. If the number is saved in the directory, the name is displayed instead.
- Date and time of the call






Displaying more information about an entry: ▶ **View** ▶ ... use  to scroll through the entry

- Number type (if the caller is entered in the directory):  **Phone Home**,  **Phone Office**,  **Phone Mobile**

Calling back a caller

▶  ▶ ... use  to select entry ▶  lift handset ... the number is dialed

Copying a number to the directory



- ▶  ▶ ... use  to select an entry ▶ **Options** ▶ **Save Number ...** then
Creating a new entry: ▶ **< New Entry >** ▶ **OK**
or
Adding a number to an existing entry: ▶ ... use  to select an entry ▶ **OK**
 - ▶ ... use  to select a number category ▶ **OK** ▶ ... use  to enter more data for the entry
- Save entry: ▶ **Save**



More information about the local directory: → p. 23

Deleting entries

Deleting an entry:


- ▶  ▶ ... use  to select an entry ▶ **Options** ▶ **Delete Entry** ▶ **OK**

Deleting all the entries in the list currently selected:

- ▶  ▶ **Options** ▶ **Delete List** ▶ **OK** ▶ confirm prompt with **Yes**

Message Centre

The Message Centre gives you quick access with a single key press to missed calls and voice mails on an answer machine.


The Message key  flashes if there are new messages. A missed call is considered new if it has been received since the **Missed Calls** list was last opened; a voice mail is considered new if it has not been listened to.



The administrator can use the Web configurator to specify which types of messages are accessible via the Message Centre.

Icons for message types and the number of **new** messages are shown in idle status.



New messages:

 on a network mailbox (→ p. 22)

 in the **Missed Calls** list (→ p. 19)

The number displayed indicates the total for all the connections involved.

Opening the Message Centre:

- ▶ Press the Message key  ▶ ... use  to select the message type (**Voice Mail** or **Missed Calls**) ▶ OK

10 Ben		
		01/04/2016
4	11	12:15
Redial	Select Line	

Messages	
Voice Mail	4
Missed Calls	11
Back	OK



The **Voice Mail** list is always displayed, when an answer machine is stored in the telephone, the **Missed Calls** list only if it contains messages.




Voice mails

Managing messages stored in a network mailbox. Every network mailbox accepts incoming calls on the corresponding VoIP phone number.




The administrator has entered the network mailbox(es) in the telephone with the Web configurator or there is an answer machine available with the PABX.

Playing back voice mails

- ▶ Press the Message key  ▶ OK ▶ ... if necessary, use  to select the answer machine (connection) ▶ OK ... all the voice mails for the connection are displayed ▶ use  to select an entry ▶ Play ... the message is played back through the speaker on the telephone

Listening to messages through the handset:

- ▶  Lift the handset




Ending playback:

- ▶ Press the End Call key  or replace the handset 



An incoming call ends playback.

Editing voice mails

- ▶ Press the Message key  ▶ OK ▶ ... if necessary, use  to select the answer machine (connection) ▶ OK ... all voice mails for the connection are displayed ▶  select entry ... then

Viewing call details: ▶ **View**

Deleting the recording:

- ▶ **Options** ▶ **Delete Entry** ▶ **OK**

Deleting all entries: ▶ **Options** ▶ **Delete List** ▶ **OK** ▶ Confirm prompt with **Yes**

Transferring the number to the directory:

- ▶ **Options** ▶ **Save Number** ▶ **OK** ▶ create a new entry in the directory or add the number to an existing entry (→ p. 23)

Directories

The options are:

- Local directory
- Company directory (→ p. 25)



The local directory is pre-set as a standard directory. That means that it is the directory that is opened with the Control key and into which entries are copied with the "Copy to directory" function.

The administrator can make another directory, such as the company directory, the standard directory.

Local directory

Opening the directory

In idle status:

▶ Press the Control key

or

▶ ▶ ... use to select **Contacts** ▶ OK ▶ **Directory** ▶ OK

The entries are shown in alphabetical order and are sorted by last name by default.

Change sort order:

▶ **Options** ▶ **Sort by First Name** or **Sort by Surname**

Directory	
Brown, Susan	
Fischer, Alexander	
View	Options



If an entry does not include a name, the first phone number entered is stored and displayed as the last name.

Displaying a directory entry


▶ ... use  to select an entry ▶ **View**

or


▶ enter the first letter of the name ... the first entry which starts with that letter is displayed

A directory entry can contain the following information:


- First name and last name: (max. 16 characters each)
- Up to six phone numbers (max. 32 digits each)

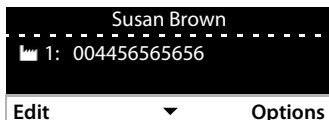


Two numbers can be assigned to the following categories:



 work numbers (**Phone Office 1/2**)

 private numbers (**Phone Home 1/2**)



 mobile numbers (**Phone Mobile 1/2**)

▶ ... use  to scroll through the directory entry

Creating a new entry

▶ **Options** ▶ **New Entry** ▶ ... use  to enter data for the entry and use  to move between the entry fields ▶ **Save**

Creating a new entry with a dialled number:


▶ Enter the number ▶ -> **Dir** ▶ < **New Entry** > ▶ **OK** ▶ ... use  to select the number category ▶ **OK** ▶ ... use  to enter more data for the entry ▶ **Save**





Creating a new entry with a number from the call list: → p. 20

Information on entering text: → p. 10

Changing an entry

▶ ... use  to select an entry ▶ **View** ▶ **Edit** ▶ ... use  to select an entry field ▶ if necessary, delete old text, enter new text ▶ **Save**






Adding a number when dialling:


▶ Enter the number ▶ -> **Dir** ▶ ... use  to select an entry ▶ **OK** ▶ ... use  to select the number category ▶ **OK** ▶ **Save**



Information on entering text: → p. 10

Dialling from the directory

- ▶ ... use  to select an entry ▶  lift the handset
- More than one number in the directory entry: ▶ ... use  to select a number ▶ **OK**
- or
- ▶ ... use  to select an entry ▶ **View** ▶ ... if necessary, use  to select a number ▶ **Options** ▶ **Use Number** ▶ **OK**

 Initiate a consultation call from the directory: → p. 16

Deleting directory entries

Delete an entry selected from the list:


- ▶  Select an entry ▶ **View** ▶ **Options** ▶ **Delete Entry** ▶ **OK** ... the entry is deleted immediately

Deleting the whole list:

- ▶ **Options** ▶ **Delete List** ▶ **OK** ▶ ... Confirm prompt with **Yes**





Company directory


If there is a directory available on your company's network you can use it on the telephone.

 The administrator has set up and activated the directory in the Web configurator.

Opening the company directory


In idle status:

- ▶ Press and **hold** the Control key  ▶ ... use  to select the company directory ▶ **OK**
- or
- ▶  ▶ ... use  to select  **Contacts** ▶ **OK** ▶ ... use  to select the company directory ▶ **OK**

 The company directory is shown with the name specified by the administrator in the Web configurator.

Searching for an entry


- ▶ Enter the name (or the initial letters) ... as soon as the entry process stops, the search starts. All the matching entries are displayed. If a matching entry is not found, the search field is redisplayed. You can launch a new search.

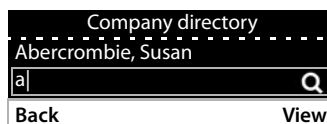

Displaying an entry

▶ ... use  to select an entry ▶ **View**

A directory entry can contain the following information (depending on the information provided by the company directory):

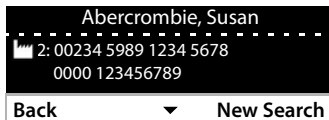



Personal information: **First Name;** **Surname;** **Job;** **Company;**


Numbers: **Office;** **Mobile;** **Home**

Other contact data: **Email;** **Web Address;** **Fax;**

Address information: **Street;** **City;** **ZIP Code;** **Country;**

Dialling a number from the company directory

▶ ... use  to select an entry ▶  lift the handset

More than one number in the directory entry: ▶ ... use  to select a number ▶ **OK**

Door interphone


The telephone can operate a door interphone.




The administrator has set up the door interphone with the Web configurator.

If someone rings at the door interphone, this is signalled like an incoming call on the phone.

The name of the door interphone is displayed as the caller.

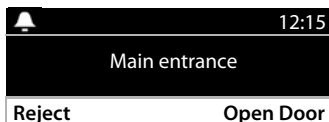

End the connection to the door interphone without opening the door: ▶ **Reject**

Hold a conversation via the door interphone: ▶  Lift the handset

Open the door: ▶ **Open Door**



If you are conducting a telephone call, the ring at the door is signalled by a Call Waiting tone (→ p. 16). You can either reject the call or accept and open the door. When the connection to the door interphone is ended, the previous connection is restored. Toggling between calls is not possible.

An incoming call is signalled as a Call Waiting if you are already connected to the door interphone. If you accept the call, the connection to the door interphone is ended.

Setting the ringtone for the door interphone: → p. 29

Settings

The telephone is preconfigured. Individual settings can be modified via the display menu or on a PC using the Web configurator. Web configurator → p. 33

Basic settings

Date and time



The address of a time server on the Internet or on the local network is stored on your phone. The date and time are taken from this time server provided that the phone is connected to the network and synchronisation with the time server is activated. Manual settings are overwritten in this case.

Settings for the time server in the Web configurator: → p. 38

- ▶ ▶ ... use to select **Settings** ▶ **OK** ▶ **Date + Time** ▶ **OK** ... then
 - Time: ▶ ... use to enter hours and minutes in 4-digit format
e.g. 0 7 PQRS 1 5 JKL for 07:15 ▶ **Save**
 - Time format: ▶ ▶ ... use to select the time format
24h: e.g. 10:00, 18:00
12h: e.g. 10:00 am, 6:00 pm
12h selected: ▶ ... use to select **Time of Day: (am / pm)**
 - Date: ▶ ▶ ... use to enter day, month and year in 8-digit format
e.g. 1 4 GHI 0 1 2 ABC 0 1 6 MNO
for 14.01.2016 ▶ **Save**
 - Date format: ▶ ▶ ... use to select date order
Day Month Year: e.g. 17.04.2016 for 17 April 2016
Month Day Year: e.g. 04.17.2016
 - Save the settings: ▶ **Save**

Ringtones

Set the volume and melody for the ringtone and/or completely silence the ringtone for anonymous calls.


Volume

The volume of the ringtone for incoming calls can be set at 10 levels.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶ **Ringtones** ▶ OK ▶ **Volume** ▶ OK ...



the ringtone will be played with the melody set for external calls at the current volume; the volume is shown graphically.



- ▶ ... use  to select the required volume ▶ **Save**










Changing the volume of the ringtone during an incoming call:

- ▶ Press the volume keys  (for louder) or  (for quieter)

Melody

Specify different ringtone melodies for different events (**External Calls**, **Internal Calls**, **Group Calls** or **Doorstation**) and VoIP connections.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶ **Ringtones** ▶ OK ▶ **Melodies** ▶ OK ▶ ... use  to select event to be signalled with the melody ▶ OK ... the melody currently set for connection 1 is played ▶ ... use  to select the melody required ▶  if necessary, select melodies for the other connections ▶ **Save**



Loading more ringtones onto the phone: → p. 37

Ringtone silencing for anonymous calls

Prevent the telephone ringing when no number is transmitted with an external call.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶ **Ringtones** ▶ OK ▶ **Anonymous Call Silencing** ▶ **Edit**  (= the telephone does not ring for anonymous calls)

Advisory tones

The handset notifies acoustically about different activities and statuses.


Confirmations: At the end of an entry or after making a setting and when a new entry arrives in the network mailbox or the call list, if an entry is incorrect.

Key Click: Each press of a key is accompanied by an acoustic signal.

These advisory tones can be switched on/off independently of each other.

▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶ **Advisory Tones** ▶ OK ... then

Confirmation/error tone after making entries:

▶ ... use  to select **On** or **Off**

Tone when keys are pressed:


▶  ▶ ... use  to select **On** or **Off**


Save the settings: ▶ **Save**

Display

Screensaver (Digital clock)

▶  ▶ ... use  to select  **Settings** ▶ OK ▶ **Display** ▶ OK ▶ **Screensaver** ... then

Switch off: ... use  to select **Off** ▶ **Save**

Switch on: ... use  to select the time the display spends in idle status before the screensaver becomes active
10, 20, 30, 40, 50 or 60 minutes



Save the selection: ▶ **Save**

End screensaver

▶ Press any key **briefly** ... the display changes to idle status

Brightness

The brightness can be set at 10 levels.

▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Display** ▶ OK ▶ **Brightness** ▶ OK ...
the current setting is shown graphically ▶ ... use  to select the brightness required ▶
Save

Contrast

The contrast can be set at 9 levels.

▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Display** ▶ OK ▶ **Contrast** ▶ OK ...
the current setting is shown graphically ▶ ... use  to set the required contrast ▶ **Save**

Colour scheme

The display can appear in a range of colour combinations.


- ▶  ▶ ... use  to select  **Settings** ▶ **OK** ▶ **Display** ▶ **OK** ▶ **Colour Scheme** ▶ **OK** ▶ ... use  to select required colour scheme ▶ **Select** ( = selected)



Changing the display settings with the Web configurator: → p. 38

Language

Set the language for the display screen.

- ▶  ▶ ... use  to select  **Settings** ▶ **OK** ▶ **Language** ▶ **OK** ▶ ... use  to select language ▶ **Select** ( = selected)



Setting the display language with the Web configurator: → p. 38

Local network

Display network settings for the telephone.

- ▶  ▶ ... use  to select  **Settings** ▶ **OK** ▶ **Local Network** ▶ **OK**

IP Address Type:

static or dynamic

dynamic

The telephone obtains its IP address automatically from a DHCP service in the network (the router, for example). The following fields show the current settings. These settings cannot be changed.

static

The telephone is provided with a permanent IP address. The administrator makes the network settings using the other fields.

IP Address:

The phone's IP address in the local network.

Subnet Mask:

The subnet mask for the local network. It specifies how many parts of the IP address make up the network prefix and how many parts make up the device address. The network prefix must be the same for all the devices in the local network.

Standard Gateway:

IP address of the system in the local network which assigns the address and forwards information to other networks. This is frequently a router.



Changes to these settings should only be made by the administrator.

Resetting the device to the factory settings

A reset returns all the settings to the default settings. Network configuration, VoIP connections, directories, call lists and all the individual settings are deleted or restored to the factory settings.



Safeguarding personnel settings from the reset: → p. 39

▶ ▶ ... use to select **Settings** ▶ **OK** ▶ **Reset** ▶ **OK** ▶ confirm prompt with **Yes**

Resetting using the device keys

▶ Disconnect the telephone from the mains power supply ▶ press the Control key ▶ holding the key down, reconnect the device with the power supply



Resetting the device with the Web configurator → p. 39

Displaying device information

The menu entry **Info** provides information about important settings on the telephone.

▶ ▶ ... use to select **Settings** ▶ **OK** ▶ **Info** ... the following information is displayed:

Device:	Telephone product name
SW Version:	Version of the firmware currently loaded on the phone.
Country Version:	Country-specific version of the product
MAC Address LAN:	The phone's device address.
IP Address:	The phone's current IP address within the local network. The IP address is usually set automatically via a DHCP server in the network.



There is more information about the settings and the status of the telephone in the status display of the Web configurator (→ p. 40).

Configuring other settings with the Web configurator



Your phone is connected to the local network.



This chapter describes the user functions in the Web configurator.

Information for administrators: → wiki.gigasetpro.com

Web configurator

Finding out the IP address of the phone

You need the IP address of the telephone to access the web configurator.

Displaying the IP address in the display menu of the telephone:

- ▶  ▶ **Settings** ▶ **Local Network** ... the IP address is displayed




The IP address can sometimes change, depending on the settings of the DHCP server in your network.

Starting the web configurator

- ▶ Open the Internet browser on the PC ▶ enter the IP address of the telephone (without any leading zeros) in the address field of the browser ... the login screen is displayed
- ▶ Select the language ▶ enter the password (preset: user) ▶ **Login** ... the Web configurator is launched, the **Ringtones** page is displayed

Changing the password

- ▶ Click on the  icon in the top right ▶ select **Change Password** ▶ enter new password ▶ re-enter new password ▶ **Set**




The password can also be changed by the administrator.

Changing the telephone PIN

The telephone PIN is used to lock the telephone keypad, for example (→ p. 10).

- ▶ Click on the  icon in the top right ▶ select **Change Phone PIN** ▶ enter current PIN (preset to 1234) ▶ enter new PIN ▶ re-enter new PIN ▶ **Set**

Changing the language

- ▶ Click on the  icon in the top right ▶ select **Change Language** ▶ select required language from the **Language** list ▶ **Set**

Ending the Web configurator

- ▶ Click on the  icon in the top right ▶ select **Logout** ... the login screen is displayed again

Functions of the Web configurator

The following illustration shows the menu entries of the Web configurator for users.

Information on the administrator functions → wiki.gigasetpro.com

Settings	Telephony	Connections	→ p. 35
		Call Settings	→ p. 35
		Call Divert	→ p. 36
		Do not Disturb	→ p. 36
	Desk Phone	Ringtones	→ p. 37
		Display	→ p. 38
	System	Date and Time	→ p. 38
		Save and Restore	→ p. 39
		Reboot and Reset	→ p. 39
	Status	Device	→ p. 40
		Connections	→ p. 40
Storage Allocation		→ p. 40	

Telephony

Changing the standard send connection

If the telephone has more than one VoIP connection, outgoing calls are initiated via the standard send connection (→ p. 11).

Changing the standard send connection:

▶ **Settings ▶ Telephony ▶ Connections**

All the configured connections are shown. The check box under **Default send connection** shows which connection is currently selected.

▶ Check the connection required ▶ **Set**

Only active connections can be selected.

Settings for Call Waiting

Specify the telephone's response when another call comes in during a call.

▶ **Settings ▶ Telephony ▶ Call Settings**

For each connection:

Prevent/permit Call Waiting:

▶ Select the option under **Display waiting call** (= Call Waiting permitted) / deselect (= Call Waiting not permitted)

Permit Call Waiting:

▶ Select **Acoustic signal** from the list

Off: the incoming call is shown in the display only

or signalling with a Call Waiting tone (beep): once or every 4, 10, or 20 seconds

Save the settings: ▶ **Set**

Setting up Call Divert



The provider/the PABX supports this function.

Forwarding incoming calls to another number or a network mailbox.

▶ **Settings** ▶ **Telephony** ▶ **Call Divert**

For each connection (**Incoming line**):

- All Calls** Forward all incoming calls.
- When Busy** Forward incoming calls when the line is busy.
- No Answer** Forward incoming calls after a defined period if they are not accepted.

Specifying the destination of diverted calls:

▶ Check the box under **Voicemail**

or

▶ check the box under **Target number** ▶ enter the number, to which calls are to be diverted

For diverting calls when **No Answer**:

▶ From the **Delay** list, select the period after which Call Divert should be activated.

Activating/deactivating Call Divert:

▶ Select the option under **Active** (= activated) / deselect (= not activated) ▶ **Set**



Setting up Call Divert via the display menu: → p. 18

Do not Disturb




The provider/the PABX supports this function.

Block phone numbers and/or all anonymous calls. Calls from blocked numbers are not signalled.

▶ **Settings** ▶ **Telephony** ▶ **Do not Disturb**

The black list contains all the blocked numbers.

- Activate the black list: ▶ Set the switch next to **DND list** to **Yes**
- Block a number: ▶ Enter **Name** and **Phone number** of the call ▶ click on **Add**
- Delete an entry: ▶ Click  next to the entry
- Delete all entries: ▶ Click **Delete all**
- Block all anonymous calls: ▶ Activate the option **Block anonymous callers** (= activated)
- Save the settings: ▶ **Set**

Desk Phone

Specifying and loading ringtones

Set a ringtone for each configured VoIP connection or use a standard ringtone for all of them.

▶ **Settings ▶ Desk Phone ▶ Ringtones**

Selecting ringtones

The standard ringtone is used for connections or events for which no individual ringtone has been set up.

▶ Select a ringtone from the **Default ringtone** list ▶ click on **Play** ... the melody selected is played on the telephone ▶ **Set**

Use the standard ringtone for all calls:

▶ click on **Use for all calls** ▶ **Set**

or

set a different ringtone for each connection:

▶ Select ringtones for the various events from the lists ▶ click on **Play** ... the melody selected is played ▶ **Set**

Different ringtones can be used for the following events: **External calls, Internal calls, Group calls, signal from the Door Station**



Setting ringtones using the display menu: → p. 29


Loading ringtones from the PC

The ringtones available are displayed with a file name and size. A maximum of 20 more ringtones can be loaded into the telephone memory from the PC.

The data on the PC must be in the following format:

Format	Max. number	Total size
mp3, ogg, wav	20	max. 5 MB

▶ Next to the **Ringtone file** click on **Browse** ▶ in the file system of the PC navigate to the location of the ringtone files in the memory and select the file required ... the file name is displayed

Load the ringtone file: ▶ Click on  ... the ringtone file is loaded into the telephone's internal memory and presented for selection in the lists

Delete a ringtone file: ▶ Click on  ... the ringtone file is deleted from the list

Save the settings: ▶ **Set**



Check available space in the memory: → p. 40

Settings for the display

Tailor the telephone display to personal preferences and requirements.

▶ Settings ▶ Desk Phone ▶ Display

- Language: ▶ Select the language to be used for the display from the **Language** list
- Screensaver: ▶ Activate/deactivate the screensaver (= activated; in idle status, a digital clock is shown on the display as the screensaver)
- Colour scheme: ▶ Select the colour scheme for the display from the Colour scheme list (**Black on white** or **White on black**)
- Illumination: ▶ Select the intensity of the display illumination from the **Backlight** list (1 – 9; 1 = dark, 9 = light)
- Contrast: ▶ Select the screen contrast from the **Contrast** list (1 – 9)
- Save the settings: ▶ **Set**



All the settings can also be made through the display menu: → p. 30

System settings

Date and time

▶ Settings ▶ System ▶ Date and Time


Defining the time server

- ▶ **Automatic adjustment of system time with time server:** select **Yes** ▶ in the **Time server** field enter the IP address of the server required . . . the most recent synchronisation with the time server is displayed ▶ **Set**

or

Entering the date and time manually

- ▶ **Automatic adjustment of system time with time server:** select **No** . . . then

- Time and date: ▶ . . . set the **Time** with the arrows ⬆️ : ⬆️
▶ . . .  open calendar ▶ select **Date** ⬆️ : ⬆️
- Time zone: ▶ Select **Time zone** from the list
- Daylight Saving Time: ▶ **Automatically adjust clock for daylight saving changes:**
Select **Yes/No**
- Time format: ▶ Select **Time format** from the list:
12h (e. g. 6:00 am) or **24h** (e. g. 18:00)
- Date format: ▶ Select **Date order** from the list:
Day Month Year (e. g. 17.04.2016) or
Month Day Year (e. g. 04.17.2016)
- Save the settings: ▶ **Set**



Setting the time and date with the display menu: → p. 28

Saving and restoring settings

Save data from the telephone to the PC and restore it back to the telephone if necessary.

▶ **Settings** ▶ **System** ▶ **Save and Restore**

Save Device Settings to PC

All settings: System settings and personal settings

Personalised settings: e. g. directory entries, ringtones, display settings


▶ click **Save all settings**

or

▶ click **Save personalized settings**

▶ select a storage location on the PC ▶ save file

Restore Device Settings from PC

▶ Click **Browse** ▶ select the stored back-up file from the file system ... the file is displayed ▶ click  ... the file is loaded; a message indicates whether the loading process has been successful or not ▶ confirm the message with **OK**

Deleting unwanted back-up files: ▶ click 

Rebooting or resetting the system

▶ **Settings** ▶ **System** ▶ **Reboot and Reset**

Restart the system: ▶ Click **Reboot system now** ▶ confirm prompt with **Yes** ... the telephone is rebooted and temporarily not ready for operation.

Reset the system: ▶ **Reset to factory settings** ▶ Confirm prompt with **Yes** ... all personal settings, lists and directory entries are deleted, passwords are reset.

Once this has been completed, the login screen is displayed again, the telephone is in idle status.



Resetting the device using the display menu: → p. 31

Status of the telephone

The **Status** menu contains information about the status of the telephone.

Device

The page shows general information about the telephone, such as the IP address, the current status of the firmware and the time and date settings.

▶ **Status** ▶ **Device**

Connections

The page shows information about the VoIP connections configured for the telephone.

▶ **Status** ▶ **Connections** . . . name and status are shown for each connection

Status	Registered	VoIP connection available.
	Not registered	Currently there is no VoIP connection assigned. The telephone cannot be used. ▶ Please contact the administrator

The **Default send connection** is marked with ✓.

Changing the standard send connection: → p. 35

Storage Allocation

The page shows the memory space occupied by the internal memory and how much is still available (in percent). Ringtone files are stored in the internal memory, for example.

▶ **Status** ▶ **Storage Allocation**

Appendix

Service (Customer Care)

Do you have any questions? For quick assistance, please refer to this user guide or visit gigasetpro.com. Our Gigaset pro reseller will be happy to help with any further questions related to your Gigaset Maxwell basic PRO.

Manufacturer's advice

Authorisation

Voice over IP telephony is possible via the LAN interface (IEEE 802.3).

Depending on your telecommunication network interface, an additional modem could be necessary.

For further information please contact your Internet provider.

This device is intended for use worldwide. Use outside the European Economic Area (with the exception of Switzerland) is subject to national approval.

Country-specific requirements have been taken into consideration.

We, Gigaset Communications GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC.

The EC declaration of your country according to 1999/5/EC can be found at:

www.gigaset.com/docs.

This declaration could also be available in the "International Declarations of Conformity" or "European Declarations of Conformity" files.

Therefore please check all of these files.

CE 0682

Environment

Our environmental statement

We at Gigaset Communications GmbH are aware of our social responsibility. That is why we actively take steps to create a better world. In all areas of our business – from product planning and production to sales and waste of disposal – following our environmental conscience in everything we do is of utmost importance to us.

Learn more about our earth-friendly products and processes online at www.gigaset.com.

Environmental management system



Gigaset Communications GmbH is certified pursuant to the international standards ISO 14001 and ISO 9001.

ISO 14001 (Environment): Certified since September 2007 by TÜV SÜD Management Service GmbH.

ISO 9001 (Quality): Certified since 17/02/1994 by TÜV SÜD Management Service GmbH.

Disposal

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority.

All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.



This crossed-out wheeled bin symbol on the product means the product is covered by the European Directive 2002/96/EC.

The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a pre-condition for reuse and recycling of used electrical and electronic equipment.

For more detailed information about disposal of your old appliance, please contact your local council refuse centre or the original supplier of the product.

Care

Wipe the device with a **damp** cloth or an antistatic cloth. Do not use solvents or microfibre cloths.

Never use a dry cloth; this can cause static.

In rare cases, contact with chemical substances can cause changes to the device's exterior. Due to the wide variety of chemical products available on the market, it was not possible to test all substances.

Impairments in high-gloss finishes can be carefully removed using display polishes for mobile phones.

Contact with liquid

If the device comes into contact with liquid:

- 1 **Disconnect the power supply.**
- 2 Allow the liquid to drain from the device.
- 3 Pat all parts dry.
- 4 Place the device in a dry, warm place **for at least 72 hours** (**not** in a microwave, oven etc.) with the battery compartment open and the keypad facing down (if applicable).
- 5 **Do not switch on the device again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

Menu tree






The following illustration shows the full menu tree of the display menu.

Call lists										→ p. 19
Contacts	Directory									→ p. 23
	Enterprise directory									→ p. 25
Select Services	Call Divert									→ p. 18
	Withhold Number									→ p. 13
	Call Waiting									→ p. 16
	Active Ringbacks									→ p. 12
Settings	Date + Time									→ p. 28
	Audio Settings	Ringtones	Volume							→ p. 29
			Melodies	External Calls						→ p. 29
				Internal Calls						→ p. 29
				Group Calls						→ p. 29
				Doorstation						→ p. 29
				Anonymous Call Silencing						→ p. 29
		Advisory Tones								→ p. 30
	Display	Screensaver								→ p. 30
		Brightness								→ p. 30
		Contrast								→ p. 30
		Colour Scheme								→ p. 31
	Language									→ p. 31
	Local Network									→ p. 31
	Reset									→ p. 32
	Info									→ p. 32





Display icons

The following icons are displayed depending on the settings and the operating status of your telephone.






Icons in the status bar

Icon	Meaning
	No VoIP connection
	USB device connected
	Keypad lock activated
	Ringtone deactivated
	Beep function activated (ringtone deactivated)

Display icons to indicate ...

Icon	Meaning
	Incoming call
	Establishing a connection (outgoing call)
	Connection established
	No connection established/connection terminated

Other display icons

Icon	Meaning
	Action complete (green)
	Action failed (red)
	Information
	Warning
	(Security) prompt

Index

-
- A**
- Accepted calls 19
 - Advisory tone
 - confirmation 30
 - key press 30
 - Alert tone (beep) 14
 - Anonymous calling 13
 - Authorisation 41
-
- B**
- Back key 3
 - Beep (alert tone) 14
 - Black list 36
-
- C**
- Call
- accept 13
 - anonymous 13
 - block 36
 - during number entry 11
 - forwarding 17
 - in call list 19
 - incoming 13
 - information 19
 - initiate 11
 - outgoing 11
 - rejecting 13
- Call divert
- deactivate 18
 - set up (display menu) 18
 - set up (Web configurator) 36
- Call list 19
- accepted calls 19
 - all calls 19
 - copying a number to the directory 20
 - delete 20
 - delete an entry 20
 - dialling a number 12, 19
 - missed calls 19
 - open 19
 - outgoing calls 19
- Call swapping 17
- Call waiting 17
- accepting a call 16
 - activating/deactivating 16
 - rejecting a call 16
 - settings (Web configurator) 35
- Caller
- name on display 13
- Caller display 13
- Care 43
- Care of the device 43
- Change telephone PIN 33
- Change the volume 15
- Colour scheme
 - set (display menu) 31
 - set (Web configurator) 38
- Company directory 25
- displaying an entry 26
 - open 25
- Conference call 17
- Conference call key 3
- Confirmation tone 30
- Connection 35
- expansion module 4
 - headset 4
 - LAN 4
 - PC 4
 - power adapter 4
 - receiver 4
 - status 40
- Consultation call 16
- Consultation call key 3, 16
- Contact with liquid 43
- Contrast
 - set (display menu) 30
 - set (Web configurator) 38
- Control key 3, 8
- Conversation
 - put on hold 16
- Copying a number
 - from the call list to the directory 20
- Corporate directory
 - searching for entry 25
- Correcting incorrect entries 10
- Correction of incorrect entries 10
- Country version 32
- Customer Care 41
-
- D**
- Date format 28, 38
- Daylight Saving Time 38
- Deactivating the microphone 15
- Default setting see Factory settings
- Delete numbers 11
- Device, status 40
- Dialling a number
 - from the call list 12, 19
 - from the company directory 26
 - from the directory 12, 25
 - from the redial list 12
 - via the keypad 11
- Dialling numbers
 - cancelling 11
- Directories 23
- Directory entry 24
- change 24
 - delete 25
 - in the corporate directory 25
 - new 24

- Directory, local
 - changing an entry 24
 - copying a number from the call list 20
 - delete 25
 - delete entry 25
 - display entry 24
 - new entry 24
 - open 23
 - Display 7
 - caller display 13
 - contrast 30, 38
 - menu tree 44
 - returning to idle status 9
 - Display icons 45
 - Display illumination
 - set brightness (display menu) 30
 - set brightness (Web configurator) 38
 - Display keys 2, 7
 - Display MAC address 32
 - Display menu 44
 - Disposal 42
 - DND (Do Not Disturb) see Silencing the telephone
 - Do not disturb 14
 - Do not disturb (DND) 36
 - Do Not Disturb key 3
 - LED 3
 - Do not disturb key 14
 - Door interphone 27
 - open the door 27
 - reject the call 27
 - Door opener 27
-
- E**
 - End key 3
 - Ending
 - a call 15
 - Entering letters 10
 - Entering numbers 10
 - Entering text 10
 - Environment 41
 - Error tone 30
 - Expansion module, connection 4
-
- F**
 - Factory settings 32
 - Firmware version 32, 40
 - Forwarding a call 17
-
- H**
 - Headset
 - changing volume 15
 - Handsfree
 - switching on/off 15
 - Handsfree key 3, 15
 - LED 3
 - Handsfree mode 11
 - changing volume 15
 - Hash key 2
 - Headset
 - changing volume 15
 - using to make calls 11
 - Headset connection 4
 - Headset key 3
 - LED 3
-
- I**
 - Icons
 - indications 45
 - status bar 45
 - Idle status, returning to 9
 - Indications, icons 45
 - Information on the telephone 32
 - Initiate consultation call
 - from the directory 17
 - IP address 32
 - finding via the display 33
 - finding via the Web configurator 40
 - obtaining automatically 31
 - static 31
-
- K**
 - Key
 - conference call 3
 - consultation call 3, 16
 - control key 3
 - display 2
 - do not disturb 3, 14
 - end/back 3
 - handsfree 15
 - handsfree mode 3
 - hash 2
 - headset 3
 - message 21
 - message centre 3
 - mute 3
 - star 2
 - volume 2, 15
 - Keypad
 - locking/unlocking 10
 - Keypad lock
 - changing the PIN 33
 - PIN 10
-
- L**
 - LAN connection 4
 - Language for the display screen
 - setting (display menu) 31
 - setting (Web configurator) 38
 - LED
 - do not disturb key 3
 - handsfree key 3
 - headset key 3
 - message key 3
 - mute key 3
 - Line
 - selecting for call 11
 - Liquid 43

Index

-
- M**
- Main menu 9
 - Making calls 11
 - Manufacturer's advice 41
 - Medical equipment 6
 - Menu 9
 - navigation 8, 9
 - open 9
 - Menu tree
 - display 44
 - web configurator 34
 - Message Centre. 21
 - Message key 3, 21
 - LED 3
 - Missed calls. 19
 - Mute key. 3
 - LED 3
 - Muting 15
-
- N**
- Number
 - copying from voice mail to the directory 22
 - showing on display 13
 - transferring to the local directory 11
-
- O**
- Open listening 15
 - Open the door 27
-
- P**
- PC connection. 4
 - Phone
 - factory settings 39
 - rebooting 39
 - Power adapter, connection. 4
 - Put on hold 16
-
- R**
- Receiver
 - connection 4
 - Redial list 19
 - dialling a number 12
 - Reset 39
 - Restart 39
 - Restore factory settings
 - using the device keys 32
 - using the display menu 32
 - using the Web configurator 39
 - Ringback
 - cancelling 12
 - initiate 12
 - Ringtone
 - activating/deactivating 13
 - delete 37
 - load 37
 - set using the display menu. 29
 - set using the Web configurator. 37
-
- setting the melody 29
 - standard 37
 - volume for incoming calls 29
-
- S**
- Safety precautions 6
 - Screensaver
 - activate/deactivate (Web configurator) 38
 - Service. 41
 - Setting language
 - for Web configurator. 33
 - Setting the date
 - display menu 28
 - web configurator 38
 - Setting the language for the Web configurator . 33
 - Setting the time
 - display menu 28
 - web configurator 38
 - Silencing the telephone 14
 - Specifying the time zone 38
 - Standard ringtone. 37
 - Standard send connection. 11
 - change 35
 - display. 40
 - Star key 2
 - Status 40
 - connections 40
 - device 40
 - memory assignment. 40
 - Status bar. 7
 - icons 45
 - Storage allocation. 40
 - Submenu 9
 - SW version see Firmware version
 - System settings
 - date and time. 38
 - saving/restoring 39
-
- T**
- Telephone
 - connections 4
 - keys 2
 - Telephone settings
 - in display menu 28
 - in the Web configurator 33
 - Time format 28, 38
 - Time server 28, 40
 - defining 38
-
- V**
- Voice mail 22
 - delete 22
 - playing 22
 - transferring number to directory 22
 - VoIP connection 11, 35
 - Volume for ringtone 29
 - Volume key 2, 15

W	
Web configurator	
accessing	33
changing password	33
de-registration	33
menu structure (users)	34
selecting language	33
settings	33
starting	33

Issued by

Gigaset Communications GmbH
Frankenstr. 2a, 46395 Bocholt

© Gigaset Communications GmbH 2016

Subject to availability.

All rights reserved. Rights of modifications reserved.

www.gigasetpro.com